



Congratulations on your Guide Gear™ purchase.

Take your game to the next level with field-tested Guide Gear™ products for a confident, competitive edge that strikes the perfect balance between performance and value.

INSTRUCTION MANUAL FOR THE SAFE ASSEMBLY AND USE OF YOUR

GG DELUXE DEER CART (Item #120146)



For assistance with your Guide Gear™ product, please contact the Sportsman's Guide customer service at 1-800-888-5222 7am-7pm CST Mon-Fri or e-mail us at:

custserv@sportsmansguide.com



#ShareTheThrill

www.SportsmansGuide.com

YOUR RESPONSIBILITIES:

DO NOT ATTEMPT TO USE THIS PRODUCT UNTIL YOU HAVE CAREFULLY READ, UNDERSTOOD AND FOLLOWED ALL INSTRUCTIONS AND SAFETY WARNINGS / LABELS.

This owner’s manual and any labels on the product provide important use and safety information. DO NOT Remove or Obscure and safety warning labels on any of your products. Failure to read and properly follow these safety warnings and assembly instructions could result in serious bodily injury or death. Please retain this manual and preserve all product labels for future reference.

■■■■■■■■■■ SAFETY WARNINGS ■■■■■■■■■■

IMPORT PRODUCT INFORMATION:

- 1.This cart is rated for a maximum distributed load of 300 pounds
2. This cart was designed and intended for manual use, to facilitate the human powered transport of game out of the field. The cart may be attached to an ATV by means of the Guide Gear Deer Cart Tow Bar (item #285088), however all tow bar warnings and instructions must be followed so as not to exceed the capabilities of your cart. Failure to follow all warnings and instructions may result in damage to property or serious bodily injury or death.

HOUSEHOLD USE ONLY

NEVER:

1. Exceed the stated 300 lb. carrying capacity.
2. Attempt to transport a person using this cart.
3. Make any modification to this product. Any modifications void the warranty.
4. Never leave children unsupervised around your deer cart or its components.

ALWAYS:

- 1.Inspect your carts carefully before each use, making sure all parts are undamaged and in good working order. Do not use your cart if any parts are missing, if you find any signs of damage or excess wear.
2. Keep all hardware and moving parts well lubricated.
3. Use your cart only for its intended purpose.
4. Store your cart in a clean, dry place, away from extremes of temperature, solvents, chemicals or other materials that could damage any of the components.
5. Use good judgment and practice general hunting safety measure and precautions.
 - a. Ensure that all persons keep extremities away from the wheels to prevent injury when cart is in use.
 - b. Keep others informed. Hunt with others or let someone know where you will be hunting and when you will return. Carry a cell phone or other two-way communication equipment in case of emergency.
 - c. Use at least two people to load heavy game onto the cart. Know your physical limitations when transporting game over rugged terrain.

 
ASSEMBLY:

1. Please inspect the shipping carton for damage or evidence that it may have been opened before you received it.

2. Inspect the condition of all contents. Inventory all parts and hardware to make sure you have all necessary equipment to assemble the cart. If any parts appear to be missing or damaged, please contact The Sportsman's Guide Customer Service for assistance.
3. No tools are required for assembly of your Guide Gear Deluxe Game Cart.


PARTS LIST:

1. Lower Base Frame -1
2. Upper Handle Frame -1
3. Side Support Bars -2
4. Axle -1
5. Wheels -2
6. Buckle Strap Set -3
7. Hardware Bag -1
 - +2-3/8" D- Pins – 6
 - +Axle Washer -2
 - + Large Axle Pin -1
 - + Small Axle Pin -2
 - +Axle Sleeve -2

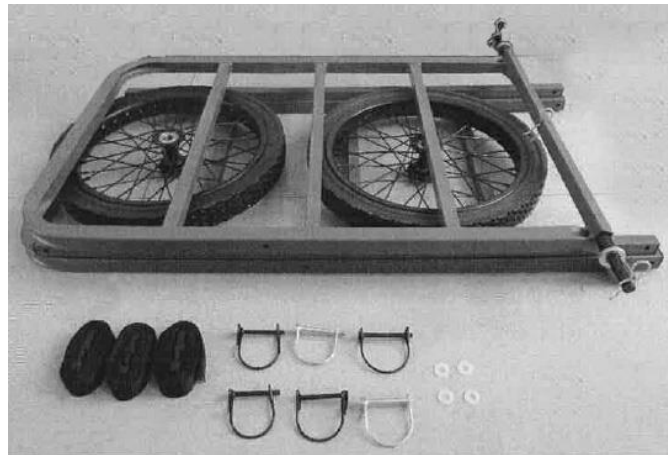


ASSEMBLY INSTRUCTIONS


 
STEP 1. Pick up the frame. Slide the axle through the axle tubing on the lower base frame.

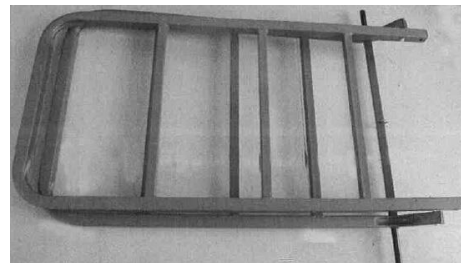


 
STEP 2. Slice the large axle pin through the hole in the middle of the axle tubing.

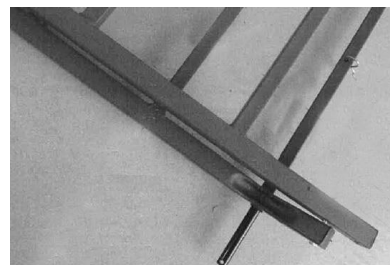

  STEP 3. Open the upper frame and use two 2-3/8" D-Pins to lock the frame.

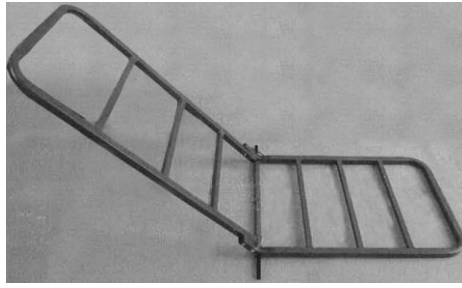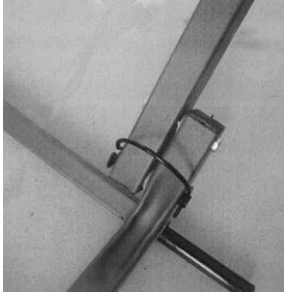

  STEP 4. Take one support bar and put it in the outside of the upper frame and the inside of the bottom frame. Use two 2-3/8" D-Pins to lock it. Repeat this step on the other side.

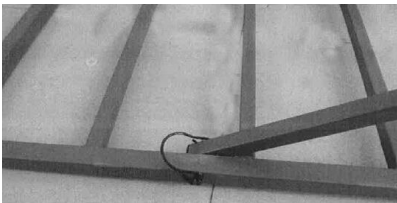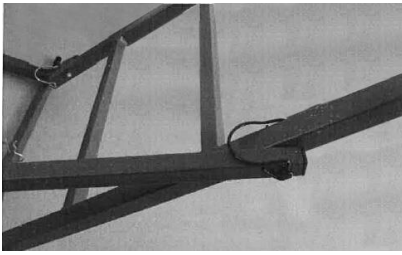

STEP 5. Slide one sleeve, wheel hub, and washer into the axle, respectively. Then use one small axel pin to lock the wheel.



STEP 6. Ensure all pins are securely in place. Your cart is now ready for use.

