



Congratulations on your Guide Gear® purchase.

Enjoy your new Guide Gear® item with confidence, knowing it has been designed and built to deliver dependable quality and performance at an exceptional value.

Item #581521 GUIDE GEAR® 14' x 14' DELUXE TEEPEE TENT



For assistance with your product, please contact Sportsman's Guide customer service at 1-800-888-3006 Mon.–Fri. 7:00am to 7:00pm, Sat.–Sun. 9:00am to 6:00pm CST or go to sportsmansguide.com/customerservice/contactus



FOR YOUR SAFETY, BE SURE TO READ ALL INSTRUCTIONS AND WARNINGS CAREFULLY.

UNDERSTANDING AND FOLLOWING ALL INCLUDED INFORMATION WILL HELP REDUCE THE RISK OF DAMAGE OR INJURY AND HELP ENSURE AN ENJOYABLE TENTING EXPERIENCE.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

WARNINGS

⚠ WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS PRODUCT. This product meets the flammability requirements of CPAI-84, IT IS NOT FIREPROOF. The product may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant coating ineffective.

NEVER allow children to handle any part of the tent without close adult supervision. Tent components such as stakes are dangerous.

NEVER allow children in or around the tent without close adult supervision.

NEVER allow the material to cover your face. It can cause suffocation and death.

NEVER use excessive force on the poles or any component of the tent or damage may result.

ALWAYS check for surrounding hazards when picking the tent site. Beware of possible falling rocks and tree limbs, lightning strikes, flash floods, strong winds and other natural hazards which may cause injury or damage.

ALWAYS anchor your tent properly to reduce the risk of damage to the tent or injury to occupants.

NEVER use candles or fuel-burning devices such as lanterns, heaters, cooking stoves, etc. in the tent. Their use poses a fire hazard and can result in asphyxiation and carbon monoxide poisoning, both of which can lead to serious, permanent injury and death.

NEVER spray the tent with insecticides or insect repellents. They can cause damage to the tent materials.

Avoid leaving the tent outdoors for a prolonged period of time. Prolonged exposure to sunlight may cause the fabric to fade.

To remove tent stakes, use a hammer or stake puller. Do not remove stakes by pulling on the tent fabric. This will cause damage to the tent.

HELPFUL INFORMATION

Familiarize yourself with all the tent components and fully assemble your tent at least once before the first adventure.

Set up the tent annually and ensure all components are accounted for and in good condition. Replace any damaged components before actual use.

Pitch the tent in an area free of sharp objects like rocks and sticks that could damage or puncture the tent floor. Using a ground cloth under the tent is recommended. Make sure the ground cloth is smaller than the tent floor. This will help prevent water from pooling between the ground cloth and tent floor.

Choose a camp site that will drain well in the event that it rains.

Make sure all the fabric ties, clips and or hooks are secured to the poles for the proper support of accessories.

Insert stakes at a 45° angle with the tops facing away from the center of the tent.

When possible, open windows and doors for increased ventilation to control condensation that may form on the inner tent surface.

Know the rules and regulations of the area where you intend to camp. Research the area for hazards. Prepare for any possible weather conditions. Be aware of emergency protocol.

Be considerate of wildlife and fellow campers. Remember to clean up your site and dispose of waste properly.

Before take-down, sweep debris from the interior of the tent using a soft bristled broom.


Brush off dirt and debris with a soft-bristled brush or cloth. Do not scrub the tent fabric, as you may damage the water-repellent properties. Gently clean soiled areas of the tent using a soft cloth, warm water and mild, non-detergent soap if needed. Rinse thoroughly.

ALWAYS make sure your tent is completely dry before storing.

Store in a cool, dry location away from direct sunlight.

Package Contents


- ❑ A - Part # TPEPT-14B: (1) Tent Body
- ❑ B - Part # TC-EPT14: (1) Carrying Case
- ❑ C - Part # 13018: (1) Center Pole
- ❑ D - Part # 15090: (1) Rain Cap (attached to tent body)
- ❑ E - Part # 15085: (1) Entry Door Pole
- ❑ F - Part # 15086: (1) Pole Bag
- ❑ G - Part # 10055: (14) Guy-lines & Tensioners
- ❑ H - Part # 10001: (30) 7.9" Ground Stakes
- ❑ I - Part # 10003: (1) Ground Stakes Bag

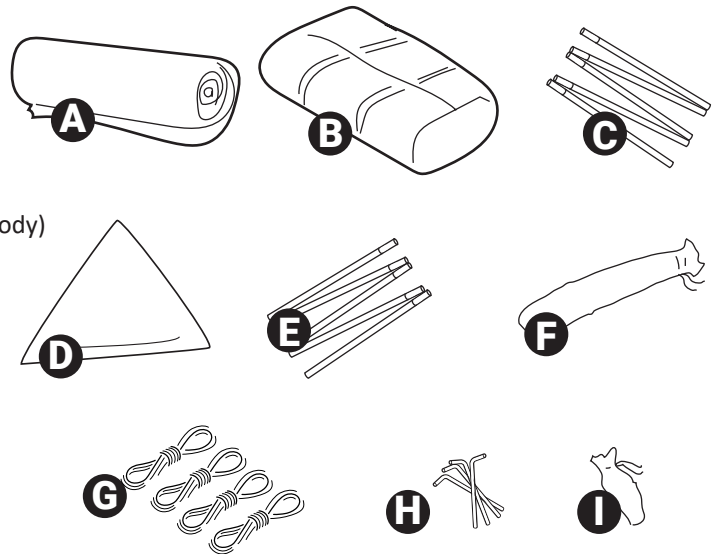

SETUP


UNROLL THE TENT AND ASSEMBLE THE POLE

1. Once you have determined the best, safest location, lay out a ground cover (not included, but recommended) and then lay out the tent body on top of the ground cover if used.
2. Make sure the rain cap is positioned so that it is centered above the pole location.
3. Assemble the center pole.
4. Loosely stake out the floor of the main tent body in a star shaped pattern.

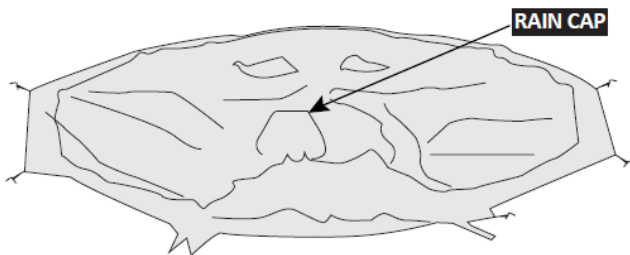

ERECT THE TENT


5. From inside the tent, insert the top of the pole into the center of the roof. Make sure the lantern hook is at the top of the pole. Stand the pole vertically, positioning it in the center of the floor.
6. Stake down the guy lines in a star-pattern.
7. Go back to adjust the floor. Pull it taunt and securely stake it down.

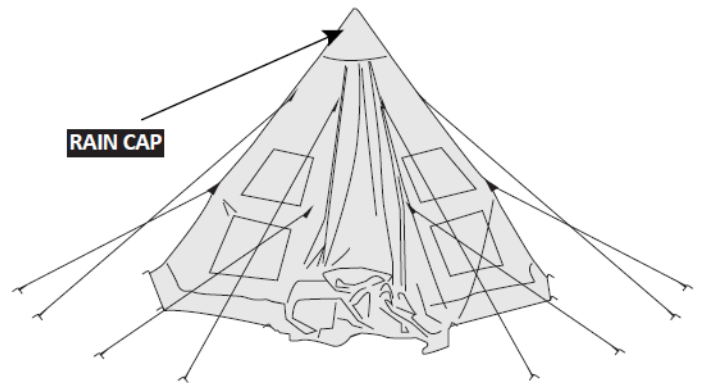

8. Adjust the guy lines for a uniform setup. If using a ground cover, ensure no section of the ground cloth protrudes from under the tent body to limit the possibility of water getting trapped between the ground cover and the tent floor and possibly entering the tent.

RAISE THE DOORWAY

9. Feed the entry door pole through the sleeve at the top of the doorway and connect the base into the tabs at the base of the tent. Stake out the guy-lines around the entry.

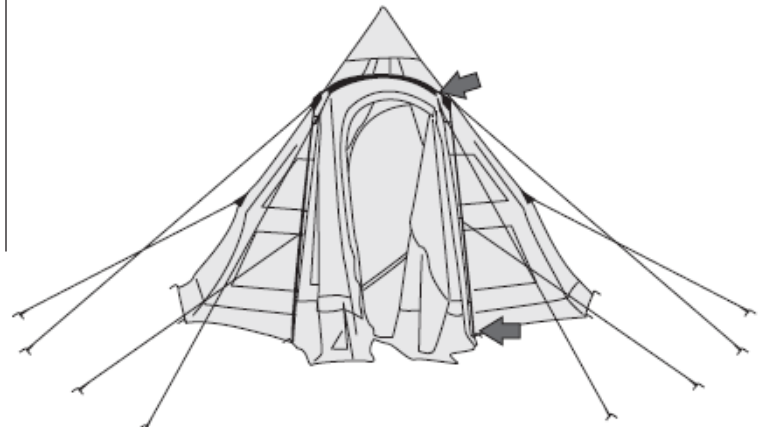

DISASSEMBLY AND STORAGE

TAKE DOWN


Cleaning, airing out and drying the tent before take down is recommended. Reference the warning page and helpful information page for additional take down details.

1. Partly unzip the door(s) to allow air to escape during take down.
2. Reverse Setup steps 1-9 on page 3.

FOLDING: Refer to diagram below for folding instructions.

1. Fold your tent walls towards the inside of the tent. Make sure the outside of the tent does not come into contact with the inside of the tent. This will help prevent dust, dirt and debris from entering the tent before transportation and storage.
2. Locate the perimeter of the floor and pull the fabric snug. (A) This allows the tent to fold neatly.
3. Fold the porch toward the center of the tent (B), then fold the tent in thirds. (C, D)

4. Use the tent bag or pole bag to measure how small the tent should be folded. Fold evenly to the necessary width (E). The width of the folded tent should be slightly less than the length of the tent bag or pole bag.
5. Roll the folded tent tight while carefully squeezing the trapped air from inside. (F)
6. Place tent into bag. (G)

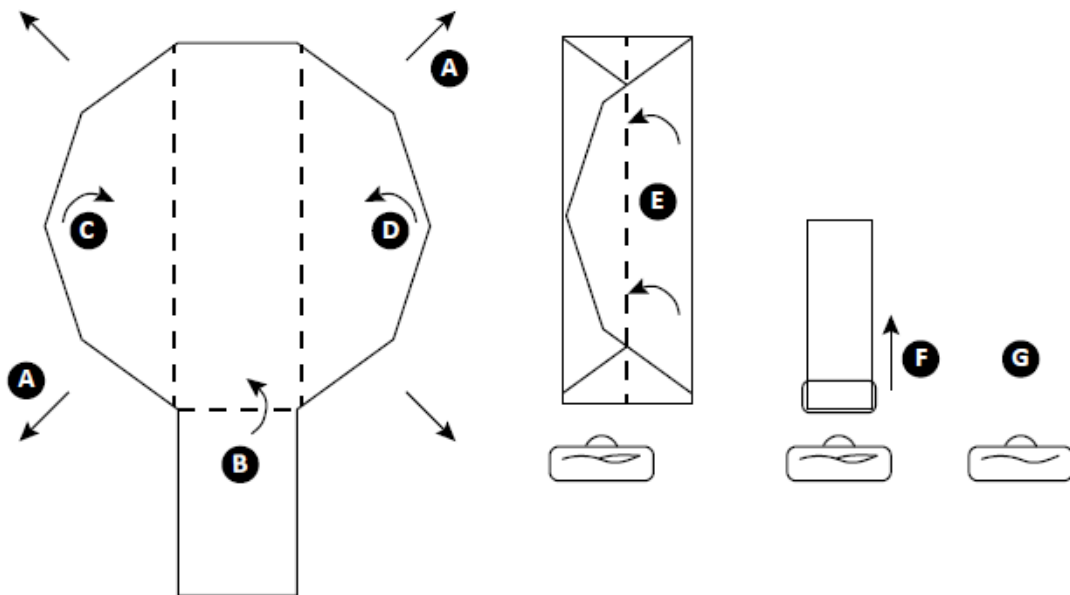

**PULL TENT PERIMETER TIGHT.
FOLD PORCH TOWARD CENTER
OF TENT.
FOLD TENT INTO THIRDS.**

**FOLD TENT TO
LENGTH OF BAG.**

**ROLL UP
TENT.**

**PLACE TENT
IN BAG.**