



Congratulations on your Guide Gear® purchase.

Enjoy your new Guide Gear® item with confidence, knowing it has been designed and built to deliver dependable quality and performance at an exceptional value.

Item #703803 Guide Gear® 18'x18' DELUXE TEEPEE TENT



For assistance with your product, please contact Sportsman's Guide customer service at 1-800-888-3006 Mon.-Fri. 7:00am to 9:00pm, Sat.-Sun. 8:00am to 8:00pm CST or go to sportsmansguide.com/customerservice/contactus



Instruction and Safety Manual

 
PACKAGE CONTENTS

- Camping Tent Body




Part # TPEPT-18B

- Center Roof Pole

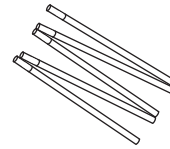


Part # 13019

 - Carrying Case

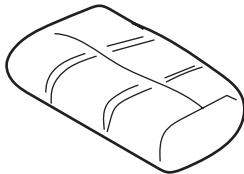

Part # TC-EPT18

 - Rain Cap

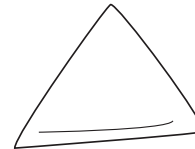


Part # 15091

- Ground Stakes (30) w/ bag



Part # 10001

 - Pole Cap
- Pole Stabilizer
- Entry door pole

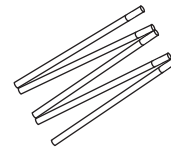

Part # 15035

Part # 15036

Part # 15093

WARNING

For your safety, be sure to read all instructions and warnings carefully.

Keep these instructions
for future reference.

GENERAL GUIDELINES FOR YOUR TENT

Store your tent in a cool dry place, free of native brush, dirt & any debris.

Avoid leaving tent outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.

Never allow children to play with this product without adult supervision.

Never store tent wet or damp.

Never allow material to cover your face. It can cause suffocation, death.

Never allow anyone to use lighted candles, matches or other sources of fire near this product.

Never expose this tent to any open flame. This product is not fireproof.

Never use a heater in this tent.

WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. Fabric will catch fire if exposed to flame. This tent is made with flame resistant fabric. IT IS NOT FIRE PROOF. This fabric will burn if left in continuous contact with any flame/extreme heat source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.

ADVERTENCIA

Mantener todo tipo de fuego y sistemas de calor lejos de la tela de esta tienda de campaña. ESTA TIENDA CUMPLE LOS REQUISITOS DE LA INFLAMABILIDAD DE CPAI-84. La tela puede prender en fuego si se expone. Esta tienda de campaña esta hecha con tela resistente al fuego. No es totalmente resistente al fuego. Esta tela se quema si se deja en contacto continuo con cualquier sistema de calor extremo y de fuego. La aplicación de cualquier sustancia extraña a la tela puede rendir las propiedades de resistencia al fuego ineficaz.

MISE EN GARDE

TENIR LE TISSU DE CETTE TENTE LOIN DE TOUTE FLAMME ET DE TOUTE SOURCE DE CHALEUR. CETTE TENTE RÉPOND AUX EXIGENCES D'INFLAMMABILITÉ DE CPAI-84. Cette tente est fabriquée d'un tissu résistant au feu, mais qui n'est pas ininflammable. Ce tissu brûlera s'il est laissé en contact continu avec une source d'inflammation.

INITIAL SETUP

Before you take your new tent on a camping trip, you need to set it up to become familiar with it and allow the material to air out.

SELECT YOUR CAMPSITE

 
Find a level spot that is protected from wind. This will ensure sleeping comfort. Remove any loose sticks and stones that will puncture the tent floor. Also choose a site that will drain well in the event that it rains.

UNROLL THE TENT AND ASSEMBLE THE POLES

Unroll the tent body and lay the floor flat on the ground. Unzip the doors. Unfold the poles and allow it to slide together. Ensure that the connections are tight. Find the door and feed the entry door pole through the sleeve around the door.

STAKE OUT THE TENT FLOOR


Stake out the floor to help in setting up the tent. (pic. 1)

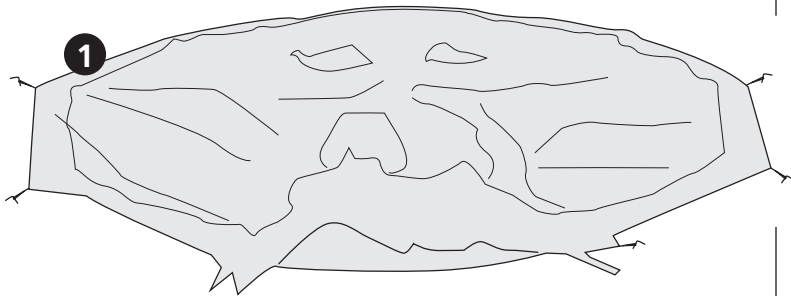


ERECT THE TENT

Assemble rain cap to the top of the center roof pole. At the base of the pole, attach the pole stabilizer over the pole cap.

 From inside of the tent, insert the small end of the top of the pole into the center of the roof. Stand the pole vertically with the pole stabilizer in the middle of the floor. Have another person hold the pole in place, and begin to stake down the guy ropes. It is recommended to stake down the ropes in a star-type pattern to keep a uniform balance of the tent. (pic. 2)

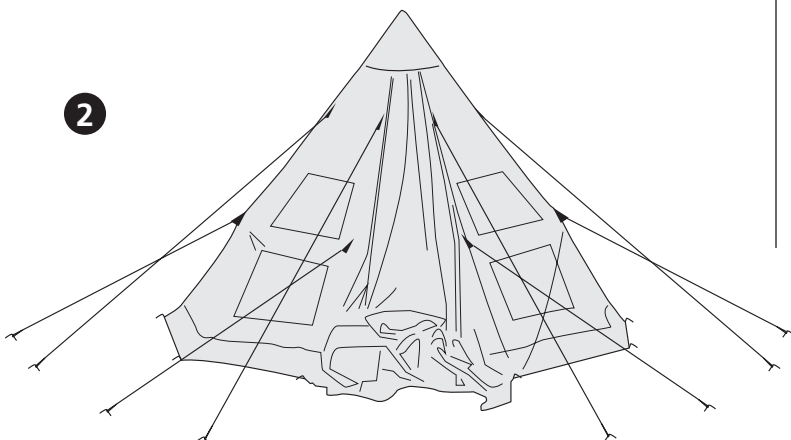

 Feed the entry door pole through the sleeve at the top of the doorway and connect the base into the tabs at the base of the tent. Stake out the guy ropes around the entry. (pic. 3)

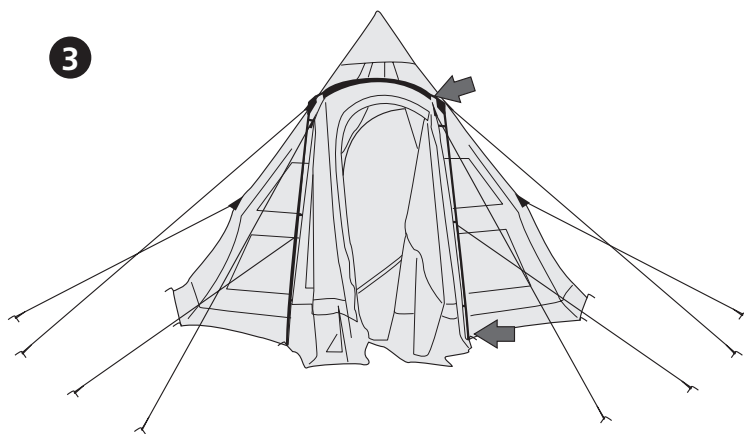

To take down the tent, reverse the process.

Care instructions:

Spot clean with mild soap and water. Ensure tent is dry before transporting or storing to prevent mildew and damage. Store in cool, dry place out of direct sunlight.

Printed in China