



Congratulations on your Guide Gear purchase.

Take your game to the next level with field-tested Guide Gear products for a confident, competitive edge that strikes the perfect balance between performance and value.

Guide Gear 12'x18' CANVAS WALL TENT - 706759-000-000

Guide Gear WALL TENT INNER ROOM - 706760-000-000

Guide Gear 12'x18' ALUMINUM FRAME - 706761-000-000

Guide Gear 12'x18' WALL TENT FLOOR - 706762-000-000



For assistance with your Guide Gear product, please contact the Sportsman's Guide customer service at 1-800-888-5222 7:30am – 6:00pm CST Mon–Fri or go to

<http://www.sportsmansguide.com/customerservice/contactus>



#ShareTheThrill

www.SportsmansGuide.com

Instruction and Safety Manual

PACKAGE CONTENTS

WALL TENT CANVAS

- 1 12' x 18' Wall Tent Canvas
- Ground Stakes
- Guy-Ropes
- Tie-Down Adjustments
- 1 Zippered Screen Door
- 1 Inner Room

- Part # WTC-1218
- Part # 10230
- Part # 10232
- Part # 10234
- Part # ZSD-1218
- Part # IR-1218

WALL TENT FRAME

- 8 Horizontal M
- 8 Horizontal F
- 8 Rafter M
- 8 Rafter F
- 2 Ridge Cap Peak Joints
- 4 Corner Joint
- 6 Intersection Joint
- 8 Frame Leg
- 2 Ridge Cap Bolt

- Part # WTHM-1218
- Part # WTHF-1218
- Part # WTRM-1218
- Part # WTRF-1218
- Part # WTPJ
- Part # WTCJ
- Part # WTIJ
- Part # WTFL
- Part # 10156

WALL TENT FLOOR

- 1 12' x 18' Wall Tent Floor

- Part # WTF-1218

WARNING

For your safety, be sure to read all instructions and warnings carefully.

Keep these instructions for future reference.

Included in these instructions are the tent, frame and floor parts lists, assembly and other details. If all components were not purchased together, please refer to the assembly instructions specific to the component you purchased when setting up.

GENERAL GUIDELINES FOR YOUR TENT

Store your tent in a cool dry place, free of native brush, dirt & any debris.

Avoid leaving tent outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.

Never allow children to play with this product without adult supervision.

Never store tent wet or damp.

Never allow material to cover your face. It can cause suffocation, death.

Never allow anyone to use lighted candles, matches or other sources of fire near this product.

Never expose this tent to any open flame. This product is not fireproof.

Never use a heater in this tent.

WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. Fabric will catch fire if exposed to flame. This tent is made with flame resistant fabric. IT IS NOT FIRE PROOF. This fabric will burn if left in continuous contact with any flame/extreme heat source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.

ADVERTENCIA

Mantener todo tipo de fuego y sistemas de calor lejos de la tela de esta tienda de campaña. ESTA TIENDA CUMPLE LOS REQUISITOS DE LA INFLAMABILIDAD DE CPAI-84. La tela puede prender en fuego si se expone. Esta tienda de campaña esta hecha con tela resistente al fuego. No es totalmente resistente al fuego. Esta tela se quema si se deja en contacto continuo con cualquier sistema de calor extremo y de fuego. La aplicación de cualquier sustancia extraña a la tela puede rendir las propiedades de resistencia al fuego ineficaz.

MISE EN GARDE


TENIR LE TISSU DE CETTE TENDE LOIN DE TOUTE FLAMME ET DE TOUTE SOURCE DE CHALEUR. CETTE TENDE RÉPOND AUX EXIGENCES D'INFLAMMABILITÉ DE CPAI-84. Cette tente est fabriquée d'un tissu résistant au feu, mais qui n'est pas ininflammable. Ce tissu brûlera s'il est laissé en contact continu avec une source d'inflammation.

1 INITIAL SETUP

Before you take your new tent on a camping trip, you need to set it up to become familiar with it and allow the material to air out.



2 SELECT YOUR CAMPSITE

Find a level spot that is protected from wind. This will ensure comfort. Remove any loose sticks and stones that may damage tent floor. Also choose a site that will drain well in the event that it rains. Layout all your items and become familiar with them.

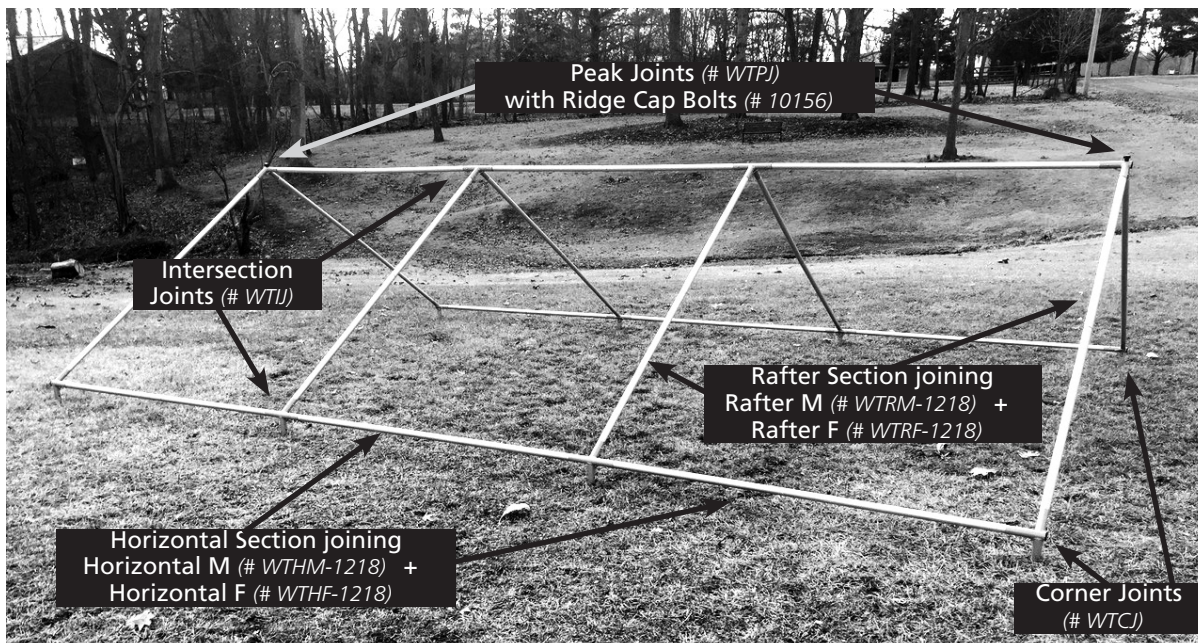

3 TENT ROOF FRAME ASSEMBLY


1. Identify your Poles and Joint Connections.
2. The shortest aluminum poles will make up the horizontal sections of the frame. Connect two short aluminum pole sections together by sliding the horizontal male pole into the horizontal female pole until they click together. This single pole will make up one horizontal section of the frame.
3. The longest aluminum poles will make up the rafter sections of the frame. Connect two long aluminum pole sections together by sliding the rafter male pole into the rafter female pole until they click together. This single pole will make up one rafter section of the frame.
4. Locate the two Peak Joint Connections that have the Ridge Cap Bolts.
5. Place the four Corner Joints at the four corners of your frame layout.
6. Lay out the six intersection joints accordingly at the intersections of the rafter and horizontal sections.
7. Connect all poles and joint connections as pictured above to create the roof frame of your wall tent.
8. Remove the Ridge Cap Bolts to prepare for the wall tent canvas.

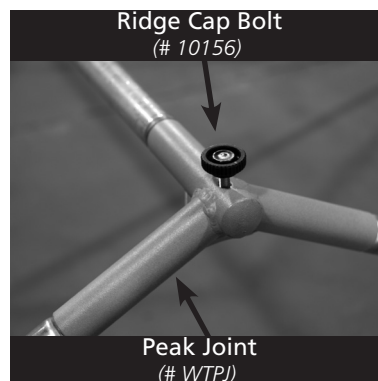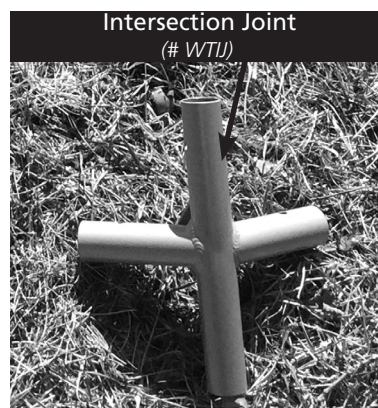

Images used are for demonstration purposes only and may not depict the actual product.

4**TENT CANVAS AND LEG FRAME ASSEMBLY**

1. Unroll Wall Tent Canvas and drape over Frame Roof. Ensure the grommets in the canvas line up with the Ridge Cap Bolt holes in the Peak Joints and reinstall the Ridge Cap Bolts.

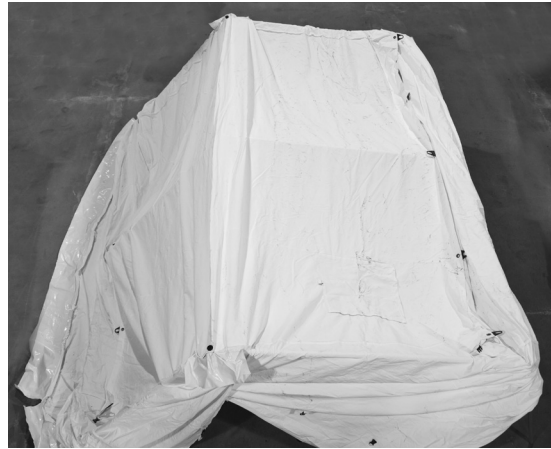

2. Lift up one side of Roof Assembly and install the Leg sections until they click into place.



3. Install Leg sections on opposite side of Wall Tent until they click into place. Pull Canvas down around frame legs and pull Sod Cloth to inside of tent under frame legs. Secure Wall Tent Canvas to Frame with ties located on inside of the canvas. Unroll Wall Tent Floor and place between Legs and Sod Cloth.




4. Stake out the four corners first. Tie the guy-ropes through the grommets as shown. Stake out the remaining holes. Use the Tie-Down Adjustments to make the tent taut by pulling away from the tent. This will help the tent stay in place and keep its shape. Stake out the loops at the base of the canvas wall.

To take down tent, reverse the process.

Care instructions:

Spot clean with mild soap and water. Ensure tent is dry before transporting or storing to prevent mildew and damage. Store in cool, dry place out of direct sunlight.

Images used are for demonstration purposes only and may not depict the actual product.

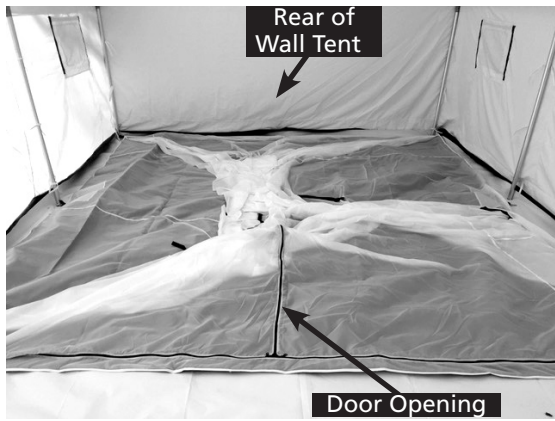


5 INNER ROOM ASSEMBLY

1. Position the inner room so its door is facing away from the rear of the canvas wall tent.



2. Attaching the inner room following the numbered sequence in the picture to the left, begin by hanging the rear corner of the inner tent on the frame in the rear corner of the wall tent.

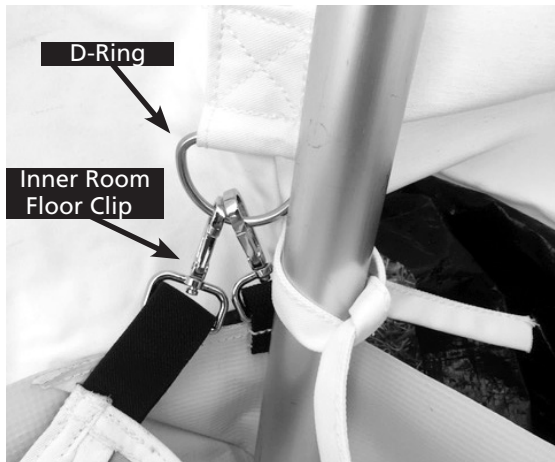

3. You will notice at the bottom of the inner tent there are clips. The clips attach to the D-rings along the bottom of the wall tent as shown in the picture below. Attach the inner tent to the frame above with the nylon straps and attach the clips below to the tents D-rings, working your way from the rear of the tent to the front. Feed the nylon straps through the plastic buckle as shown below.



To take down tent, reverse the process.

Care instructions:

Spot clean with mild soap and water. Ensure tent is dry before transporting or storing to prevent mildew and damage. Store in cool, dry place out of direct sunlight.