




Congratulations on your CASTLECREEK® purchase.

We're proud to help you furnish and enhance the place you call home. Whether indoors or outside, CASTLECREEK® is the perfect choice for comfortable living at an exceptional value.

**Item #712754 CASTLECREEK® 47" Fire Pit with BBQ Grate**

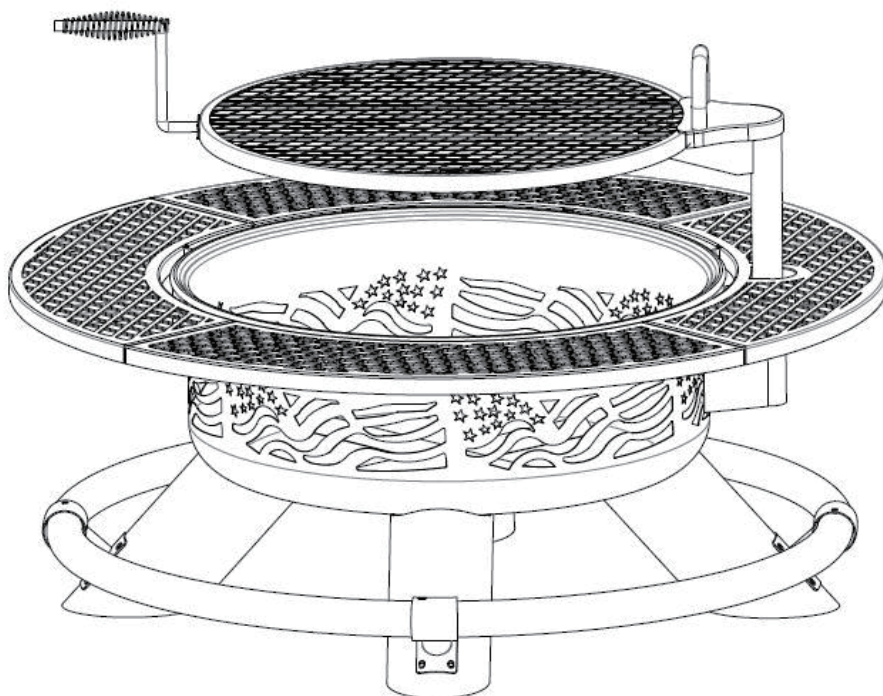

For assistance with your product, please contact the Sportsman's Guide customer service at 1-800-888-3006 Mon.-Fri. 7:00am to 9:00pm, Sat.-Sun. 8:00am to 8:00pm CST or go to [sportsmansguide.com/customerservice/contactus](https://sportsmansguide.com/customerservice/contactus)



## WARNINGS

- ⚠ **WARNING: ALWAYS** read and understand all warnings, cautions, installation and use instructions prior to installing or using this product. Failure to follow all warnings, cautions and instructions may result in fire or explosion, which could cause property damage, serious injury, or death.
- ⚠ **WARNING:** Improper installation, adjustment, alteration, service or maintenance may result in property damage, serious injury or death.
- ⚠ **WARNING:** For outdoor use only. **NEVER** use in any building, garage, other enclosures or under any structure. This fire pit is **NOT** for commercial use.  
**NEVER** use under an overhead or near any unprotected combustible constructions. **AVOID** using near or under overhanging trees and shrubs.  
**NEVER** use this product in or on boats or recreational vehicles.
- ⚠ **WARNING: NEVER** use this product for indoor heating. **TOXIC** carbon monoxide fumes can accumulate and cause asphyxiation or death.  
**NEVER** leave children or pets unattended near the product. Not intended for use by children. **ALWAYS** use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.  
**ALWAYS** exercise the same precautions you would with any open fire.

**NEVER** assemble or operate the fire pit under the influence of alcohol, prescription or non-prescription drugs.

**NEVER** attempt to modify this product or subject it to an installation or use for which it was not designed. Doing so may result in damage and/or serious injury.

**NEVER** allow other persons to install or use this product until they have read this manual and have developed a thorough understanding of how the product works.

**NEVER** use this product until it is COMPLETELY assembled with all parts securely fastened and tightened.

**ALWAYS** use this product on a hard, level, non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. **NEVER** use on wood surfaces.

Keep all electrical cords away from the fire pit.

**ALWAYS** maintain proper distance from other structures keeping the area free of combustible materials.

**NEVER** store or use gasoline or other flammable vapors or liquids in the vicinity of this product, including automobiles, trucks, vans or recreational vehicles.

**NEVER** use this product in windy conditions.

Avoid breathing smoke from the fire and avoid getting it into your eyes.

- ⚠ **CAUTION:** all surfaces of this fire pit are hot with in operation. To avoid burns, **NEVER** touch the fire pit until it has completely cooled. **NEVER** touch ashes or coals to see if they are hot.

**ALWAYS** thoroughly inspect your product for signs of damage and creosote build up prior to each use, installation or removal. **NEVER** use the product until any damaged parts have been properly replaced and clean up is executed.

**ALWAYS** empty the fire pit before each use.

**NEVER** remove ashes or coals until they are completely extinguished.

**NEVER** move or store this product until ashes and coals are completely extinguished.

**ALWAYS** use heat-resistant gloves or hot pads when contacting handles. **NEVER** wear flammable or loose clothing when operating this fire pit.

This fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke. **NEVER** burn lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.

**NEVER** use gasoline, kerosene, diesel fuel, lighter fluid or any other accelerant to start or relight fire.

**NEVER** lean over this fire pit when lighting or in use. **ALWAYS** use long, sturdy fire pit tools when adding or moving logs. **NEVER** place wood directly into bottom of the fire pit. Place wood only on the center of the fire bowl.

**NEVER** place hot pit tools onto combustible surfaces such as but not limited to, grass, wood decks, or furniture.


**NEVER** overload the fire pit. **NEVER** add additional firewood until the fire burns down. CAUTION: if any portion of the fire pit is glowing red, it is overloaded.

The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when using this product. Always be aware of the environment and ensure that the product is used in a safe and responsible manner.



Save these instructions for future reference for anyone that is assembling or operating this product.

# Parts and Hardware

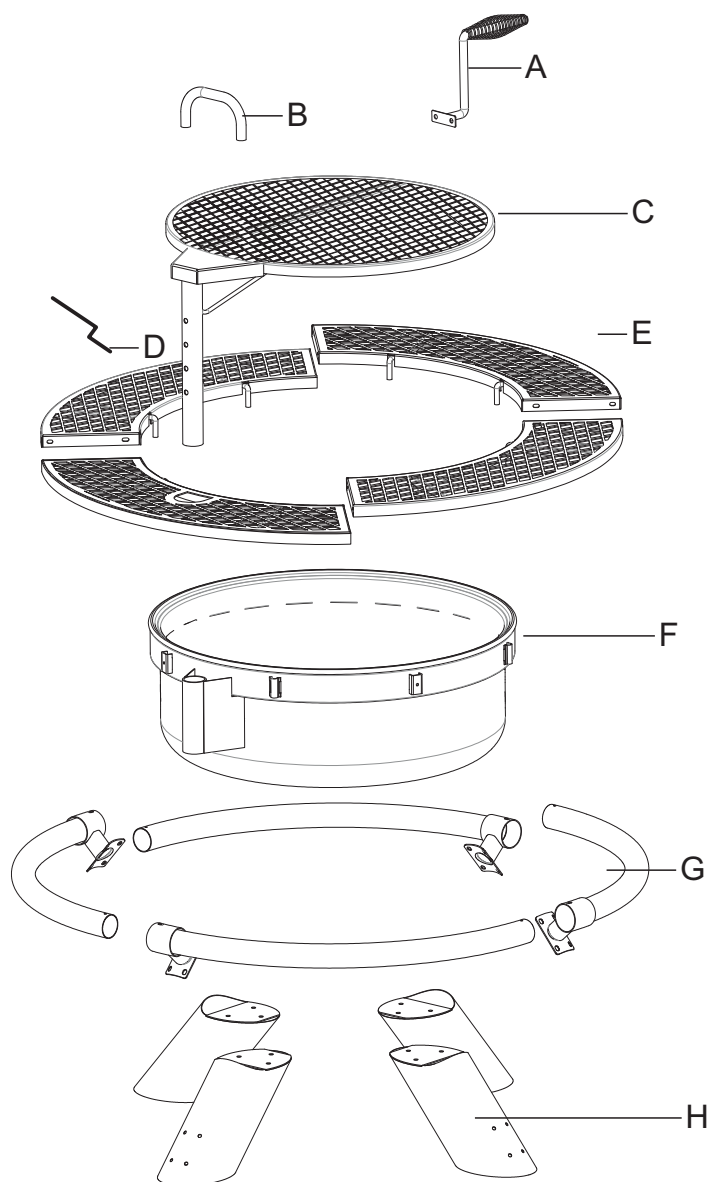




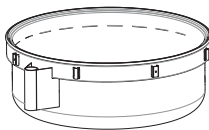


Please check the contents of the packaging to ensure all parts are included.







## Tools Required (Not Included)

Description	Picture
Phillips Head Screwdriver	
Adjustable open end wrench	

## Parts List

Part #	Description	Picture	Quantity
A	Swing Handle		1
B	Lift Handle		1
C	Cooking Grate		1
D	L-Pin		1
E	Table Panel		4
F	Fire Bowl		1
G	SupportRing Section		4
H	Leg		4


## Hardware

Hardware #	Description	Picture	Quantity
J	M6 x 14 Bolt		36
L	M6 x 20 Bolt		8
M	M6 Nut		10
N	Wing Bolt		4

# Assembly Instructions

## Step 1


Attach (4) legs (H) to fire bowl (F) with (12) M6 x 14 bolts (J)

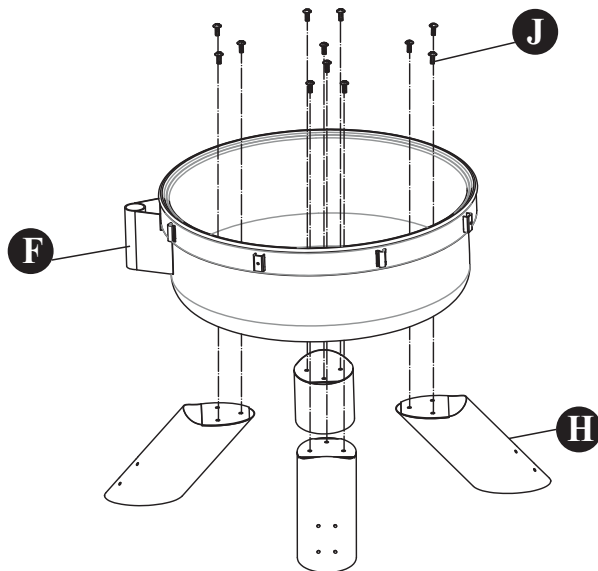

## Step 2


Insert one support ring section (G) into another and attach the support ring assembly to leg (H) with (4) M6 x 14 bolts (J) as illustrated. Repeat the same procedure to install the other support ring sections (G).

NOTE: Keep all bolts loose during the assembly of this step until all parts are installed into the correct position.

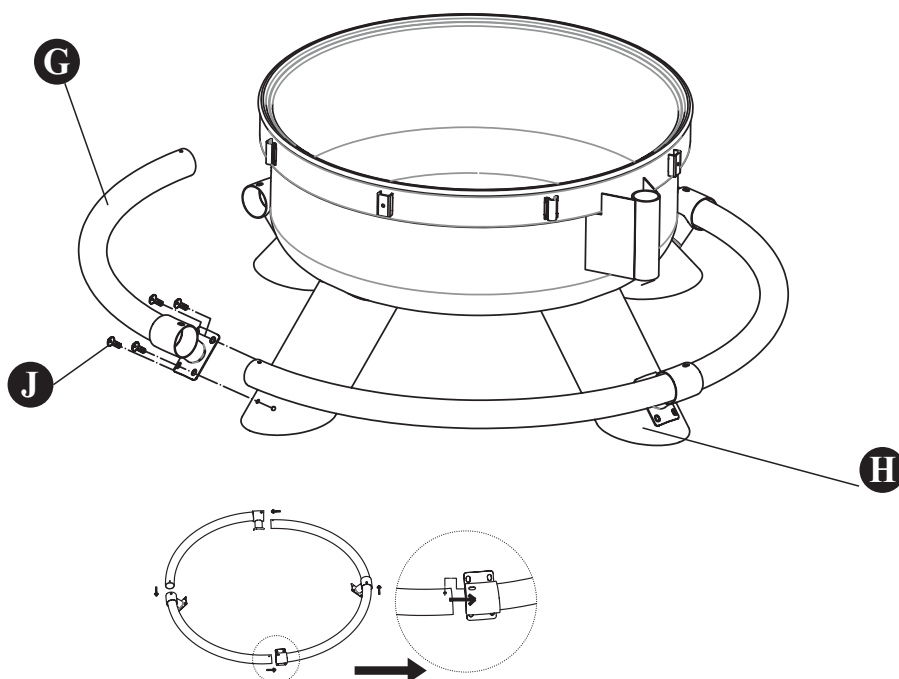

### Step 3


Secure (4) support ring sections (G) with (4) M6 x 14 bolt (J).

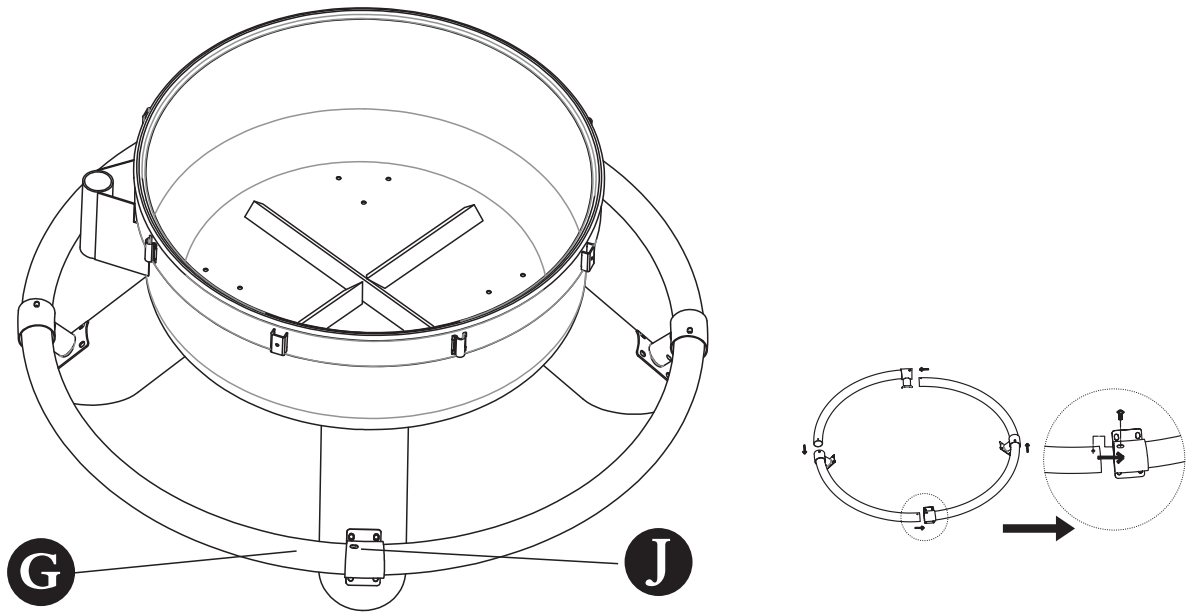

### Step 4


Insert (2) the pins on table panels (E) into the fixed brackets on the fire bowl (F) as illustrated. Connect table panels (E) with (8) M6 x 20 bolts (L) and (8) M6 nuts (M). Attach (4) wing nuts (N) to the fixed brackets on the fire bowl (F) as illustrated.

NOTE: The hole on the table panel (E) should be placed right upon the pole on the fire bowl (F).

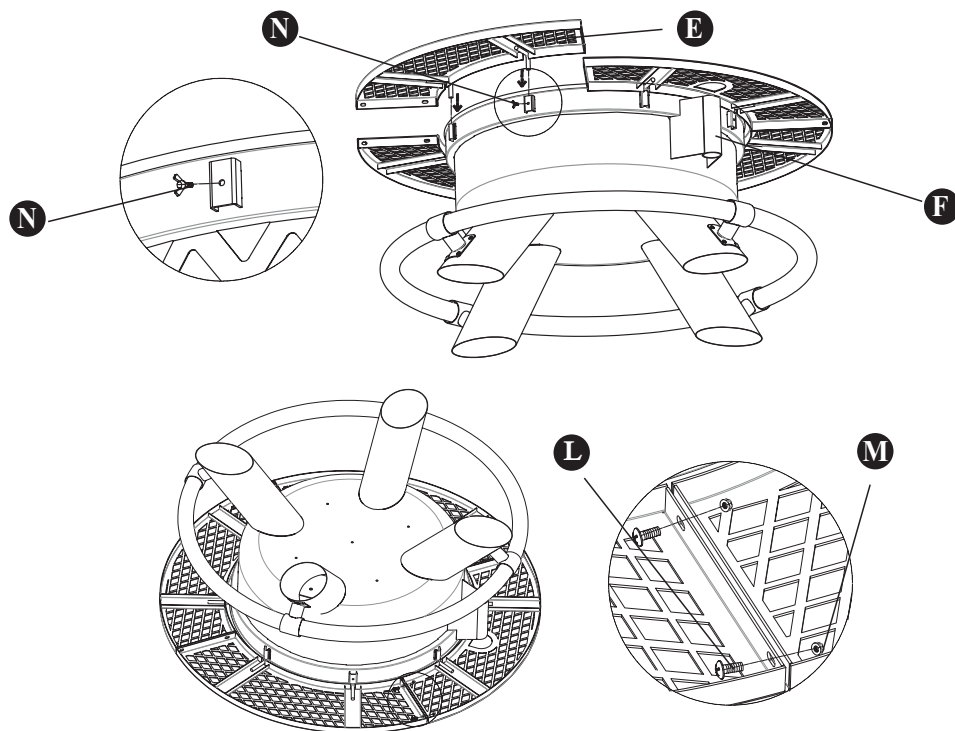

### Step 5


Attach the lift handle (B) to cooking grid (C) with (2) M6 x 14 bolts (J) as illustrated. Attach the swing handle (A) to cooking grid (C) with (2) M6 x 14 (J) and (2) M6 nuts (M) as illustrated.

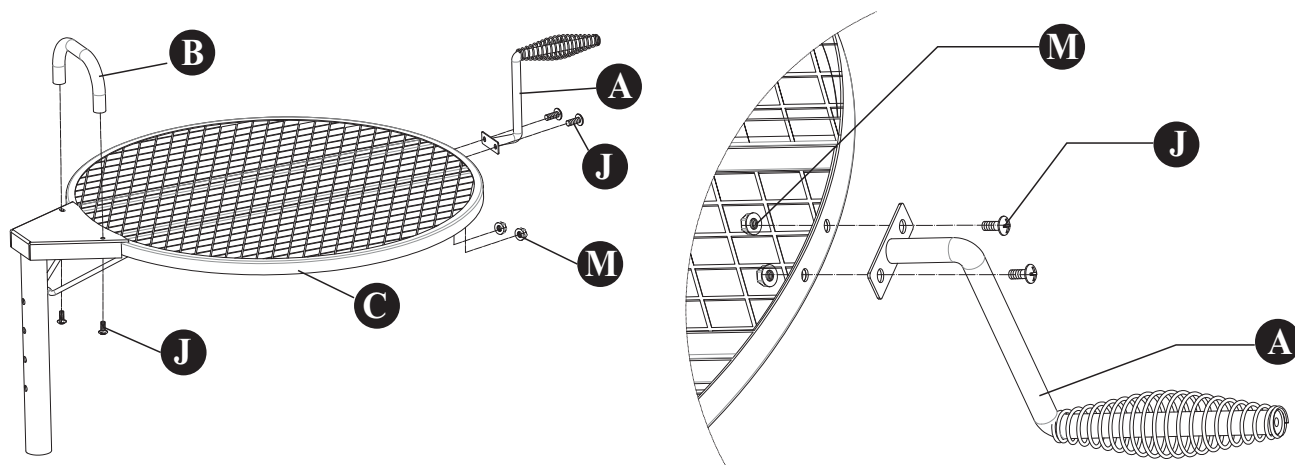

### Step 6

Insert the cooking grid (C) post into the table opening.

Insert L-pin (D) into the hole on the cooking grid securing the pole.

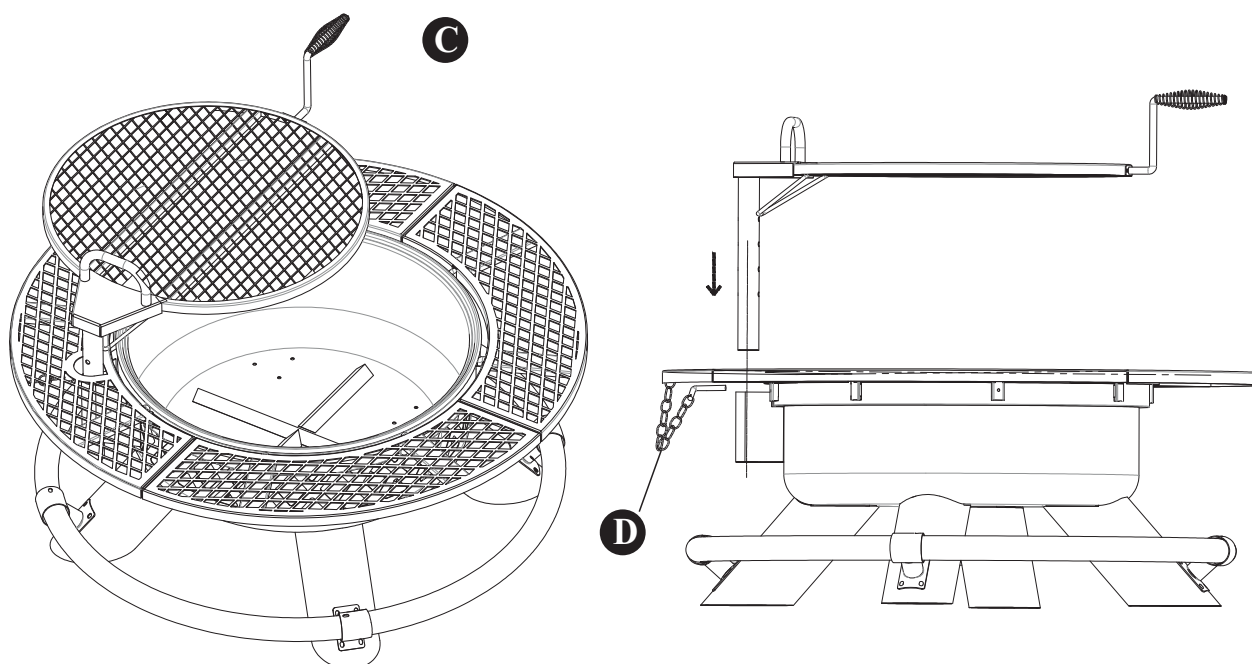

## CARE AND MAINTENANCE

### Lighting:

- Make sure there is only a small amount of ash in the bottom of the bowl.
- Place a layer of dry kindling or a natural fire-starter onto the center of the fire bowl.
- Place above that a layer of dry seasoned hardwood that is no more than 3/4 the length of the bowl diameter.
- Use a match to light kindling.

### Tending the Fire:

- You may need to shift and/or add logs for an ideal experience.
- **NEVER** place hot fire pit tools onto combustible surfaces such as grass, wood decks or furniture.
- While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
- **NEVER** add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
- Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top of coals, careful not to shift ashes.

### Extinguishing:

- Allow fire to burn itself out.
- **NEVER** use water to extinguish it is dangerous and can cause damage to the fire pit.

### Inspecting:

- The fire pit should be inspected on a regular basis to ensure product safety and longer product life.
- **NEVER** attempt to inspect this fire pit until the fire is COMPLETELY out and cool to the touch.
- Check components for any signs of damage or rust. If damage is found **DO NOT** operate the fire pit until repairs are executed.

### Cleaning:

- This fire pit should be cleaned on a regular basis for safer experiences and a longer product life.
- NOTE: after repeated use, a slight discoloration of the finish may occur.
- **NEVER** attempt to clean this fire pit until the fire is COMPLETELY out and cool to the touch.
- **NEVER** use oven cleaner or abrasive cleaners as they will damage this product. **NEVER** clean any part of this fire pit in a self-cleaning oven as it may damage the finish.
- Wipe exterior surfaces with a mild dish-washing detergent or baking soda. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush. Rinse and clean with water. Remove built-up creosote from components with a chimney cleaning product.

### Storage:

- **NEVER** move or store this product until the fire is COMPLETELY out and cool to the touch.
- Once the fire is out, coals are cold and fire pit is cool to the touch, remove ashes and dispose of properly.
- Store the fire pit in a dry location to prolong the life of the product.
- Store assembled product in a location away from children and pets.