



Congratulations on your CASTLECREEK® purchase.

We're proud to help you furnish and enhance the place you call home. Whether indoors or outside, CASTLECREEK® is the perfect choice for comfortable living at an exceptional value.

Item #714648 CASTLECREEK® 12' x 10' Pergola



For assistance with your product, please contact the Sportsman's Guide customer service at 1-800-888-3006 Mon.-Fri. 7:00am to 9:00pm, Sat.-Sun. 8:00am to 8:00pm CST or go to sportsmansguide.com/customerservice/contactus



WARNINGS AND CAUTIONS:

- Read and understand all warnings, cautions, assembly, installation and use instructions prior to assembling, installing or using this product. Failure to follow all warnings, cautions and instructions may result in serious injury or property damage.
- Confirm all parts are present before assembly. If any part is missing, cracked or damaged, please contact Sportsman's Guide customer service before assembly.



WARNIGN: This package contains small parts and is a choking hazard, keep away from children and pets.

- NEVER attempt to modify this product or subject it to an installation or use for which it was not designed. Doing so may result in damage and/or serious injury.



CAUTION: Some edges may be sharp - Assemble with caution and wear gloves during assembly.

 

 

 

 

 

 







 
- Keep all flame and heat sources away from this pergola.
- Pergola fabric is water resistant but not water proof and may leak during exposure to precipitation.
- At least two people are recommended for safe assembly and installation of this product.
- Begin assembly no less than 6 feet from any obstruction such as a fence, garage, house, shed, overhanging branches, laundry line or electrical wires and on a level surface clear of hard or sharp objects.
- This pergola is intended for decorative and sunshade purposes only and is not meant to withstand inclement weather including high winds, rain and snow.
- Once assembled, make sure the product is placed on a firm, level surface.
- Periodically check all nuts and bolts for tightness during usage.

CARE AND MAINTENANCE:

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Be sure the gazebo is completely dry before storing it.

Assembly Instructions

DO NOT tighten bolts and screws fully until assembly is complete.

No	PARTS LIST	DESCRIPTION	QTY	No	PARTS LIST	DESCRIPTION	Qty
A		Leg tube	4	F1		Decorated tube 3	2
B		Crossbeam 1	2	G		Connected plate 1	4
B1		Crossbeam 2	2	H		Connected plate 2	5
C		Crossbeam 3	2	I		Foot Base	4
C1		Crossbeam 4	2	J		Canopy	1
D		Border	10	X	 M6*15	M6X15 Bolt	66
E		Roof tube	7	X1	 M6*45	M6X45 Bolt	10
E1		Decorated tube 1	7	X2		Screw	32
F		Decorated tube 2	2	X3		Wrench	1
K		Stake	16				

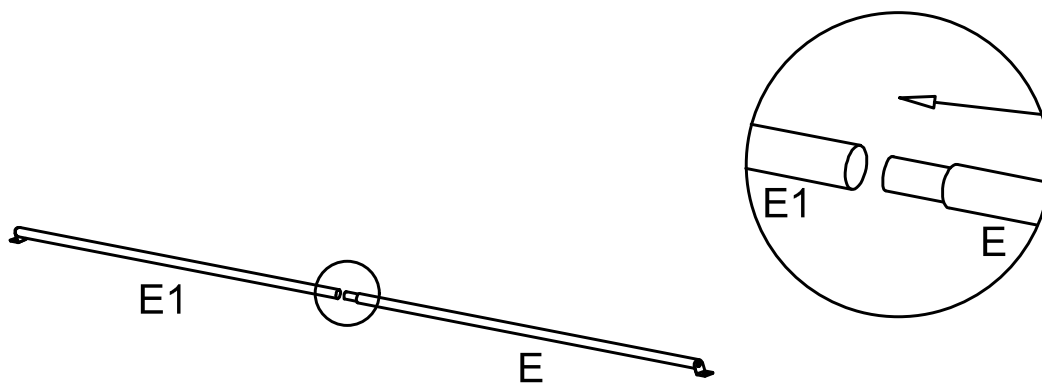


Fig.1

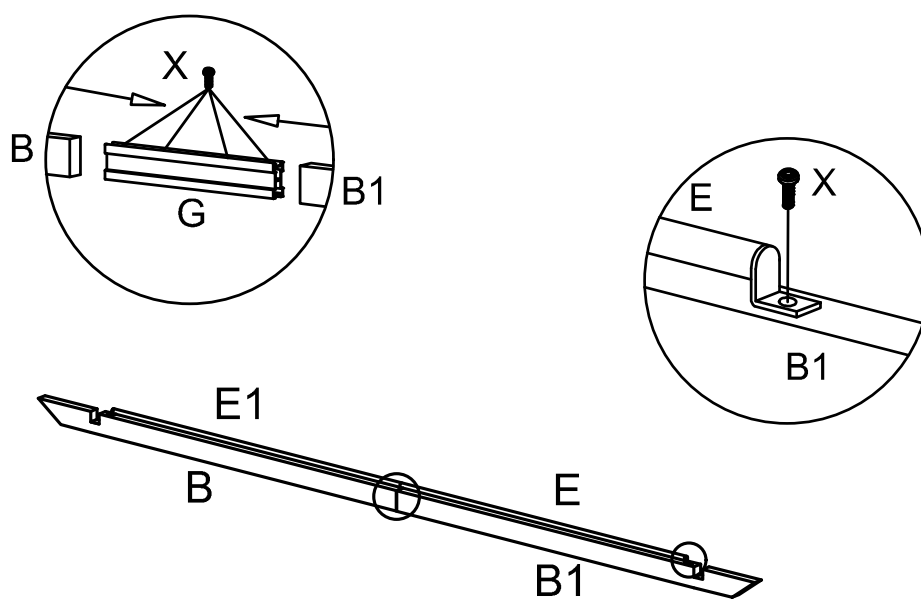


Fig.2

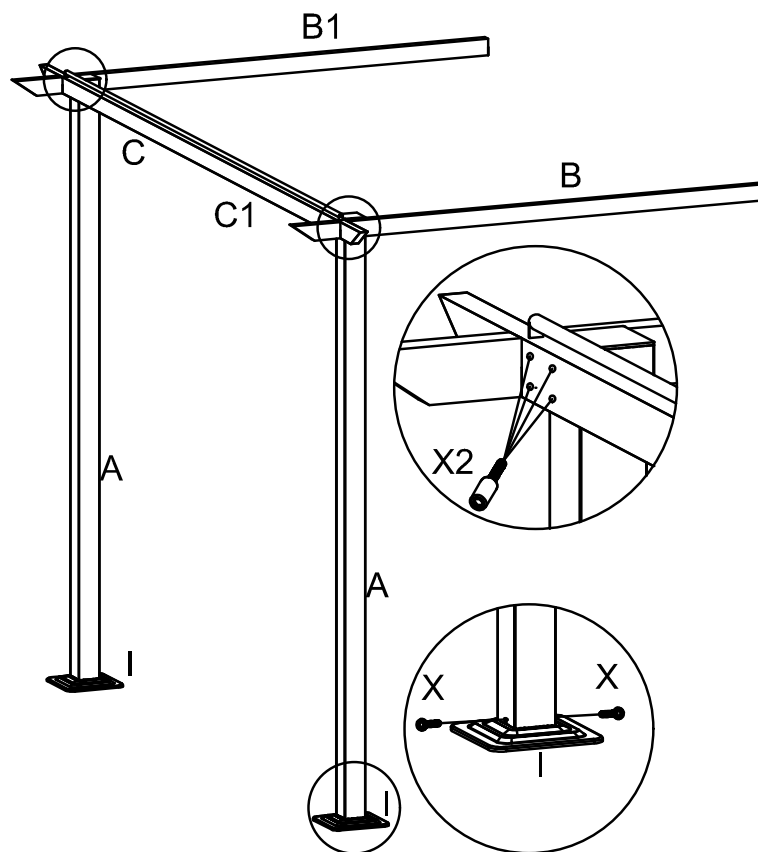


Fig.3

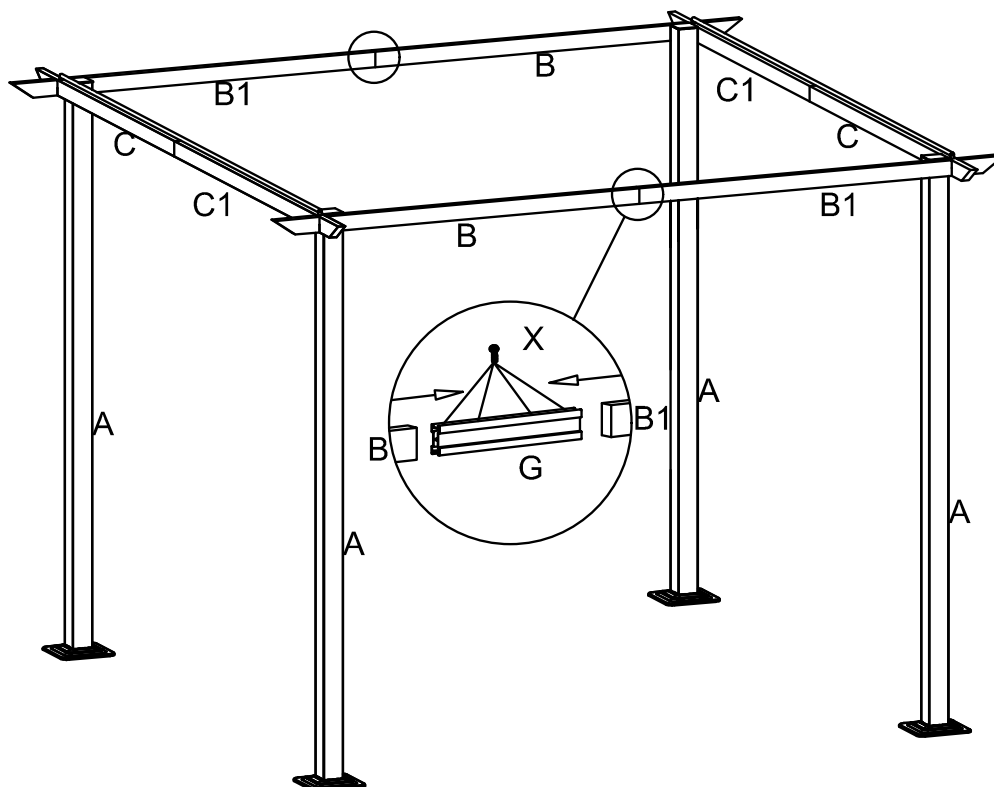


Fig.4

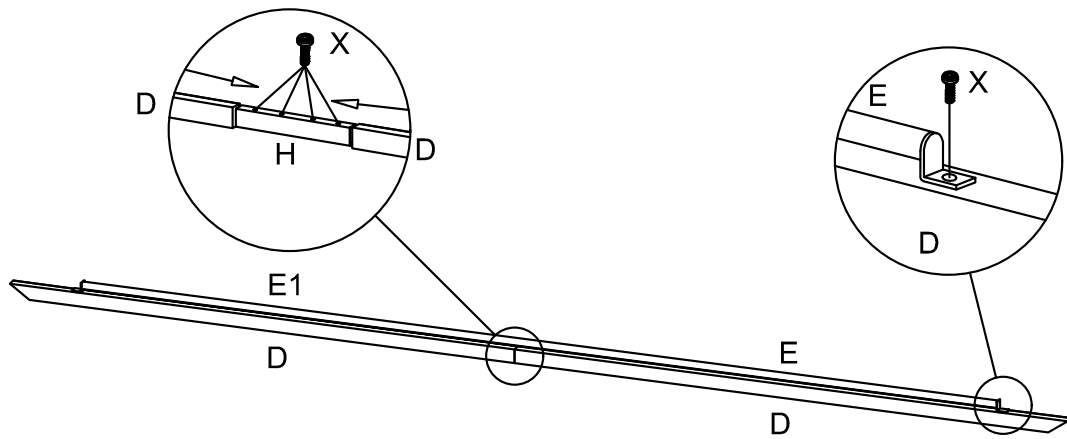


Fig.5

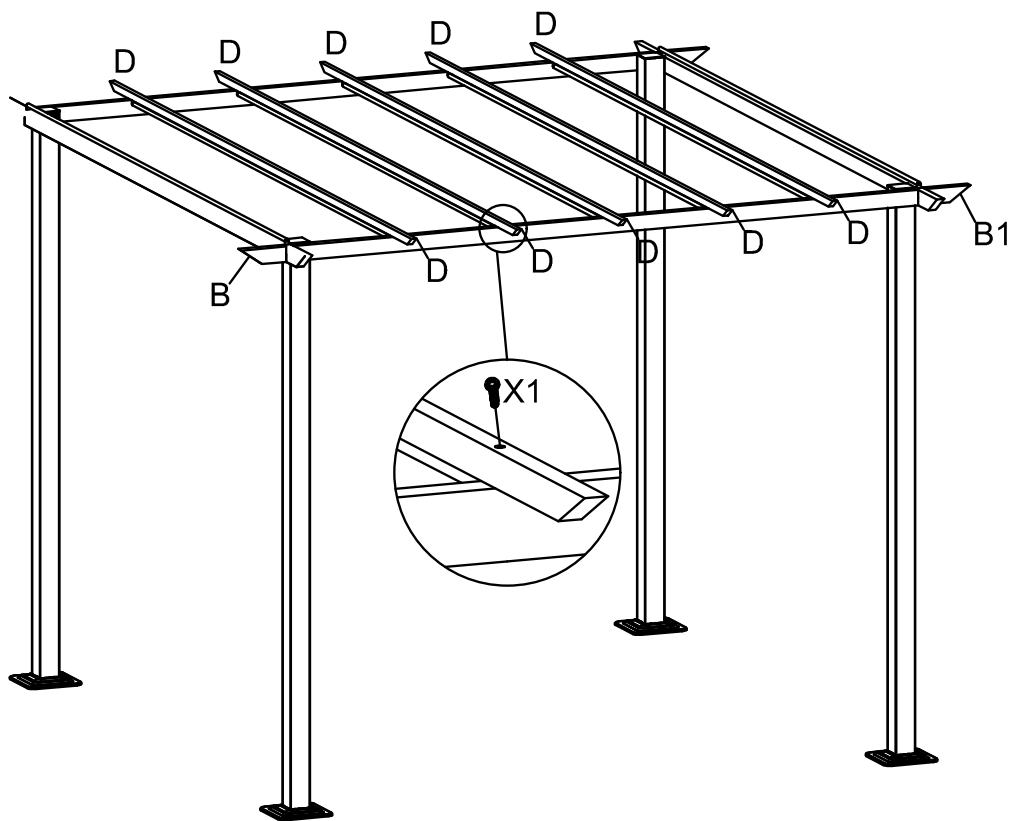


Fig.6

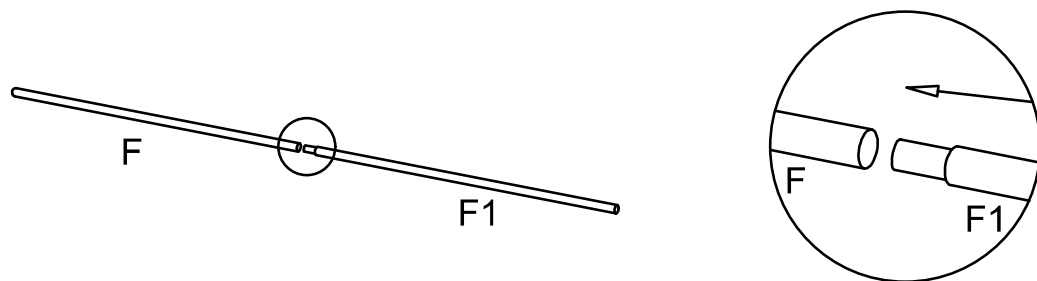


Fig.7

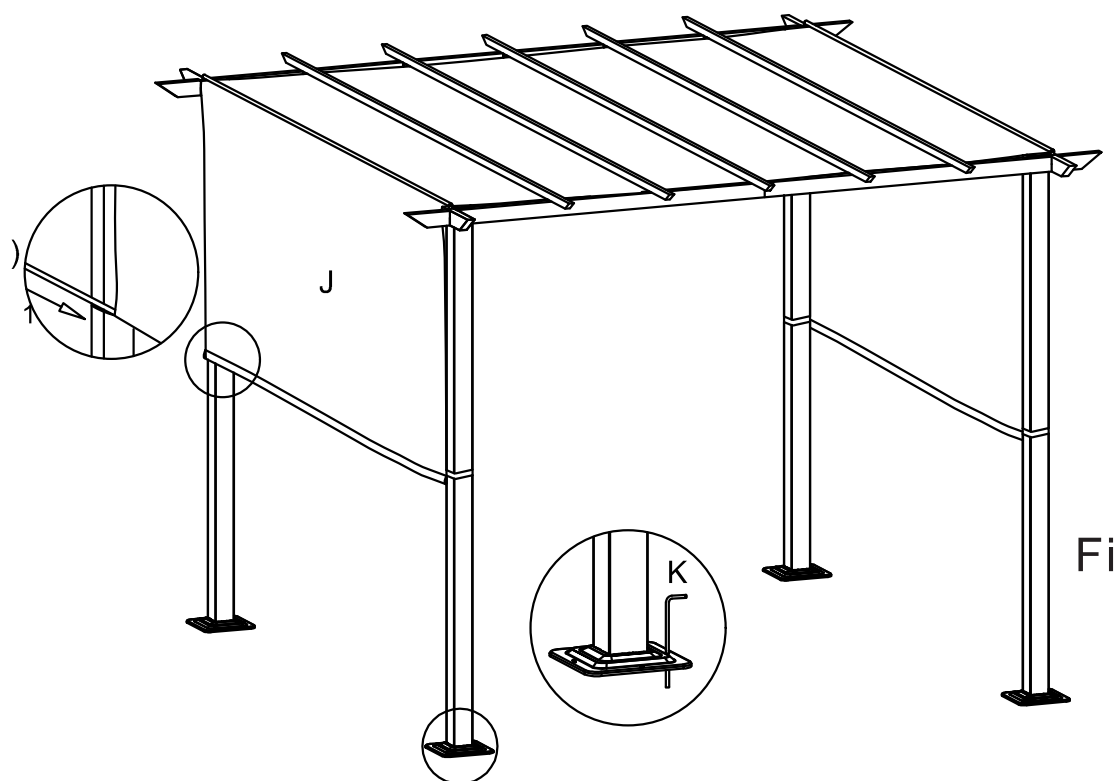


Fig.8