



CASTLECREEK®

Congratulations on your CASTLECREEK® purchase.

We're proud to help you furnish and enhance the place you call home. Whether indoors or outside, CASTLECREEK® is the perfect choice for comfortable living at an exceptional value.

Item #716837 CASTLECREEK® Cosmic Fire Pit



For assistance with your product, please contact the Sportsman's Guide customer service at 1-800-888-3006 Mon.-Fri. 7:00am to 9:00pm, Sat.-Sun. 8:00am to 8:00pm CST or go to sportsmansguide.com/customerservice/contactus




Parts Check List

Tools Required:

- Phillips Head Screwdriver
- Adjustable Wrench

Part #	Quantity	Part Description
A	1	Fire Bowl
B	1	Screen Lifting Tool
C	1	Spark Screen
D	4	Outer Ring Section
E	1	Hardware Pack
F	3	Stand Legs
G	1	Cooking Grill

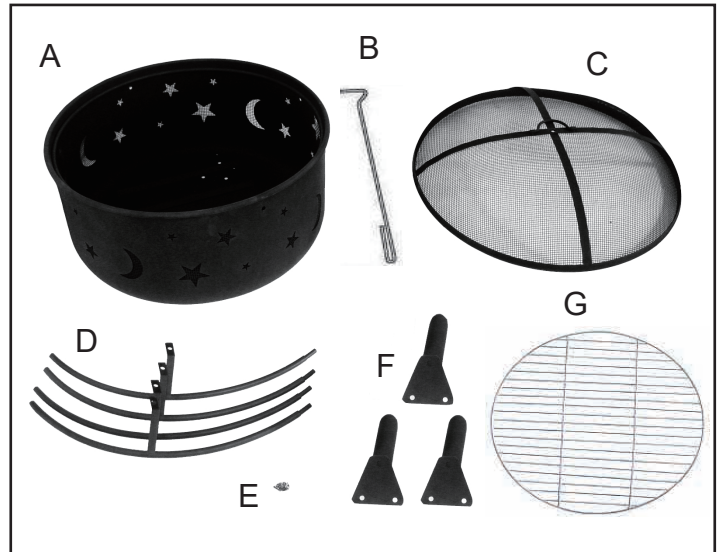

CAUTIONS and WARNINGS

- Read and understand all warnings, cautions, assembly, installation and use instructions prior to assembling, installing or using this product. Failure to follow all warnings, cautions and instructions may result in serious injury or damage to personal property.
- Confirm all parts are present before assembly. If any part is missing, cracked or damaged, please contact Sportsman's Guide customer service before assembly.
- ALWAYS use this product on a hard, level, non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose.
- NEVER use on wooden decks/surfaces or balconies.



WARNING: This package contains small parts and is a choking hazard, keep away from children, and pets.

- For outdoor use only. NEVER use in any building, garage, other enclosures or under any structure. This fire pit is NOT for commercial use.
- NEVER use during dry or windy conditions.
- NEVER use under an overhead or near any unprotected combustible constructions. AVOID using near or under overhanging trees and shrubs. Do not use in a location that could pose a safety hazard.
- ALWAYS use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
- ALWAYS use fire-resistant gloves when handling the hot metal screen or lifting tool.
- Not intended for use by children. Do not leave children unattended around product.
- NEVER allow other persons to assemble, install or use this product until they have read this manual and have developed a thorough understanding of how the product works.
- NEVER attempt to modify this product or subject it to an installation or use for which it was not designed. Doing so may result in damage and/or serious injury.
- ALWAYS thoroughly inspect your product for loose parts and/or signs of damage prior to each use, installation or removal. NEVER use until any loose parts have been properly secured or damaged parts have been properly replaced.



WARNING: NEVER store or use gasoline or other flammable vapors or liquids in the vicinity of this product, including automobiles, trucks, vans or recreational vehicles.

- ALWAYS completely extinguish fire before leaving. NEVER leave the unit unattended by an adult while hot or in use.
- ALWAYS wait for the ashes to cool for disposing of them properly. Ashes can remain hot for long time after the fire is extinguished.
- ALWAYS empty the fire pit before each use.



WARNING: NEVER use gasoline, kerosene, diesel fuel, lighter fluid or any other accelerant to start or relight fire.

- NEVER overfill fire pit.
- This fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke. NEVER burn lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
- The warnings, cautions, and instructions in this manual cannot cover all possible conditions or situations that could occur. Exercise common sense and caution when installing/using this product.

Assembly Instructions

Step 1:

Carefully unpack all parts. Inspect for missing parts or damage.

Step 2:

Align holes of Fire Bowl (A) with holes of stand Legs (F). Insert Bolts through holes of Fire Bowl and Legs and attach with Nuts (Fig 1). Attach all three (3) legs to Fire Bowl and securely fasten bolts with screwdriver and wrench.

Step 3:

Attach four (4) Outer Ring Sections together by inserting each end together forming ring as shown (Fig 2). Once assembled, place ring around Fire Bowl and align screw holes of fire bowl and ring. Insert bolts through screw holes and attach nuts (Fig 3). Hand tighten nuts only until all bolts are in place. Securely tighten with screwdriver wrench.

Step 4:

Insert screws through underside of ring at each joint in Outer Ring (Fig. 4). Securely fasten with screwdriver.

Step 5:

Place put on the Cooking grill and Screen if needed (Fig 5).

Step 6:

Your fireplace is now ready for outside use on a level non-combustible surface.

Please read and follow all Warnings and safety instructions before using.

General Care

- Do not use abrasive detergents or pads to clean surround or fire bowl.
- As with any outdoor grill, periodic maintenance is required to return painted steel surfaces to original appearance. Remove any rust with sandpaper or steel brush and repaint with grill paint suitable for high-temperature surfaces. Follow manufacturer's instructions.

Figure 1



Figure 2

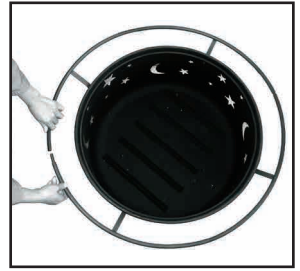


Figure 3



Figure 4



Figure 5



Figure 6

