



Congratulations on your Guide Gear® purchase.

Enjoy your new Guide Gear® item with confidence, knowing it has been designed and built to deliver dependable quality and performance at an exceptional value.

**Item #718855 Guide Gear® Base Camp Tent**



For assistance with your product, please contact Sportsman's Guide customer service at 1-800-888-3006 Mon.-Fri. 7:00am to 9:00pm, Sat.-Sun. 8:00am to 8:00pm CST or go to [sportsmansguide.com/customerservice/contactus](https://sportsmansguide.com/customerservice/contactus)



# Instruction and Safety Manual

## PACKAGE CONTENTS

 
- Camping Tent Body

Part # BC-200B




- Carrying Case

Part # BC-200C

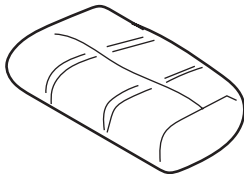

- Center Pole (120") (1)

 Part # 20051

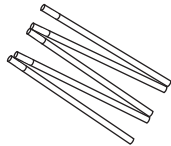


- Side Poles (49") (16)

Part # 20052



- Porch Pole (1)

 Part # 20053

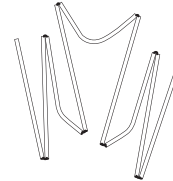

- Removable Porch Floor (1)

Part # 20054



- Tie-down Ropes & Tensioners (23)

Part # 20055



- Ground Stakes (11") (36)

Part # 20056



### WARNING

For your safety, be sure to read all instructions and warnings carefully.

Keep these instructions  
for future reference.

#### GENERAL GUIDELINES FOR YOUR TENT

Store your tent in a cool dry place, free of native brush, dirt & any debris.

Avoid leaving tent outdoors for any extended period of time. Prolonged exposure to sunlight may cause fabric to fade.

Never allow children to play with this product without adult supervision.

Never store tent wet or damp.

Never allow material to cover your face. It can cause suffocation, death.

Never allow anyone to use lighted candles, matches or other sources of fire near this product.

Never expose this tent to any open flame. This product is not fireproof.

Never use a heater in this tent.

### WARNING

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT. THIS TENT MEETS THE FLAMMABILITY REQUIREMENTS OF CPAI-84. Fabric will catch fire if exposed to flame. This tent is made with flame resistant fabric. IT IS NOT FIRE PROOF. This fabric will burn if left in continuous contact with any flame/extreme heat source. The application of any foreign substance to the fabric may render the flame resistant properties ineffective.

### ADVERTENCIA

Mantener todo tipo de fuego y sistemas de calor lejos de la tela de esta tienda de campaña. ESTA TIENDA CUMPLE LOS REQUISITOS DE LA INFLAMABILIDAD DE CPAI-84. La tela puede prender en fuego si se expone. Esta tienda de campaña esta hecha con tela resistente al fuego. No es totalmente resistente al fuego. Esta tela se quema si se deja en contacto continuo con cualquier sistema de calor extremo y de fuego. La aplicación de cualquier sustancia extraña a la tela puede rendir las propiedades de resistencia al fuego ineficaz.

### MISE EN GARDE

TENIR LE TISSU DE CETTE TENTE LOIN DE TOUTE FLAMME ET DE TOUTE SOURCE DE CHALEUR. CETTE TENTE RÉPOND AUX EXIGENCES D'INFLAMMABILITÉ DE CPAI-84. Cette tente est fabriquée d'un tissu résistant au feu, mais qui n'est pas ininflammable. Ce tissu brûlera s'il est laissé en contact continu avec une source d'inflammation.



## INITIAL SETUP

Before you take your new tent on a camping trip, you need to set it up to become familiar with it and allow the material to air out.

## SELECT YOUR CAMPSITE

Find a level spot that is protected from wind. Clear any debris that may puncture the tent floor. Also, choose a site that will drain well in the event that it rains.

## UNROLL THE TENT AND ASSEMBLE THE POLES

1. Lay out the tent and locate the porch. Position the entrance of the tent according to your preference.



Loosely stake out the floor of the main tent body in a star shaped pattern . Position an assembled side pole, rope and additional stake on the ground at each floor stake-down point to help save time later.

Assemble the center pole.

## ERECT THE TENT

2. Insert the center pole into the center of the tent roof. Slowly raise the tent, allowing air to enter.

 


3. Begin erecting the perimeter of the tent by inserting the side poles. Put the top of the pole through the awning grommet and insert the metal pin on the stake loop through the bottom of the pole to hold it in place. Attach the rope to the awning loop and stake it out loosely so that it can be adjusted later if necessary.



## ERECT THE PORCH

4. Assemble the porch frame pole.

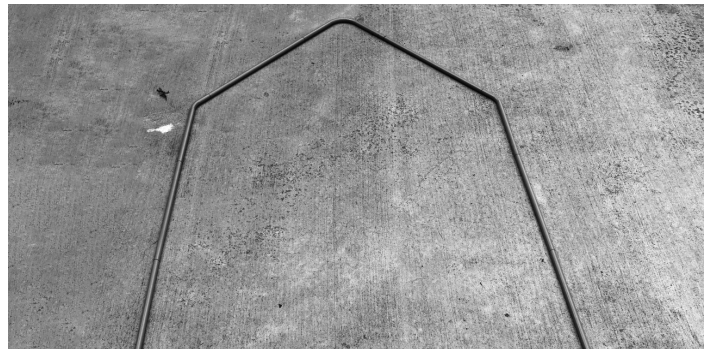

5. Locate the peak of the porch entrance and attach the longest rope through the loop. Do not stake it down yet.



6. Locate the velcro tabs on the inside of the porch. They are on each side inside the porch. Use the velcro tabs to attach the porch frame pole to the tent fabric. Begin at the peak of the porch and work your way down to the base of the tent.



7. The base of the porch frame poles will use the pins at the bottom corners of the tent front door. At this location there will already be a tent perimeter pole connected. There are two pins at this location. One is for the side pole already in place and one is for the porch frame pole that you have assembled and are securing in place.





8. Next, close the porch door and stake out the front corners of the porch by inserting a stake through the bungee loops. Insert a pole through the awning grommet at the front corner of the porch on both sides. The bottom of the pole goes inside the stake bungee loop at the bottom to secure it in place.



9. Stake down the rope that you previously inserted at the peak of the porch in Step 6. Make sure it does not block you from entering and exiting the porch.



 
10. Stake down the porch bungee loops that are closest to the main tent body.



11. At the awning location where the porch attaches to the main tent there is a grommet that will use the side perimeter pole already in place. At this location, one pole will secure the tent awning and the porch awning.




12. The remaining side poles are used for the two side doors. Unzip the side door on both sides allowing it to open. Put the top of the pole through the awning grommet and insert the metal pin on the stake loop through the bottom of the pole to hold it in place.

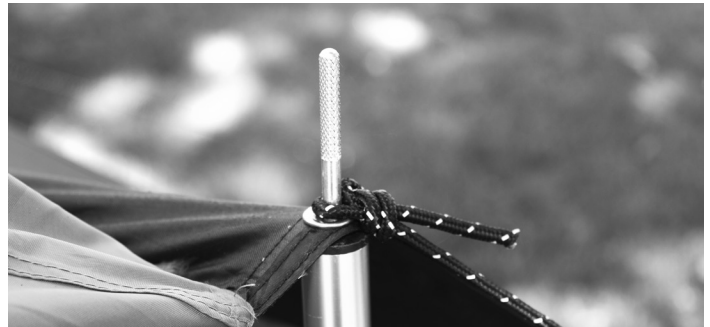

Attach the rope to the male nipple and stake the ropes out. Make sure the ropes do not block your access to the door.

#### Removable porch floor

 12. Insert the porch floor with the velcro strips facing the side walls of the porch. Align the floor so the velcro strips line up with the velcro strips along the bottom of the porch side walls. Attach the hooks on each corner of the floor to the bungee stake loops to further secure the floor in place.

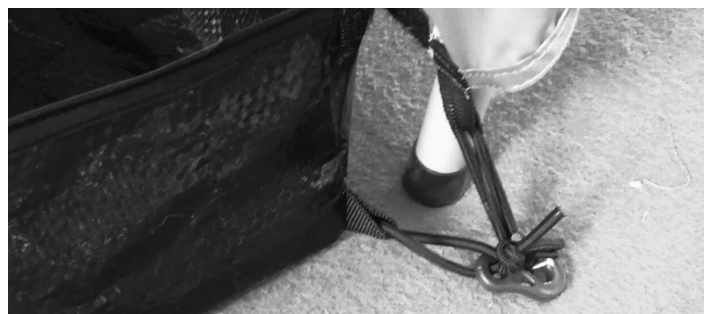

#### Care instructions:

Spot clean with mild soap and water. Ensure tent is dry before transporting or storing to prevent mildew and damage. Store in cool, dry place out of direct sunlight.