




Congratulations on your CASTLECREEK® purchase.

We're proud to help you furnish and enhance the place you call home. Whether indoors or outside, CASTLECREEK® is the perfect choice for comfortable living at an exceptional value.

CASTLECREEK® Cedar Log and Cedar Diamond Log Beds

- 235867 - Log Twin
- 235868 - Log Double
- 235869 - Log Queen
- 235870 - Log King

- 297896 - Diamond Twin
- 297897 - Diamond Double
- 297898 - Diamond Queen
- 297899 - Diamond King

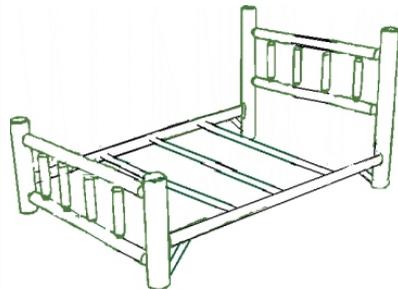


For assistance with your product, please contact Sportsman's Guide customer service at 1-800-888-3006 Mon.-Fri. 7:00am to 9:00pm, Sat.-Sun 8:00am to 8:00pm CST or go to [sportsmansguide.com/customerservice/contactus](http://sportsmansguide.com/customerservice/contactus)


Confirm all parts are present and undamaged before assembly. Please contact Sportsman's Guide customer service for any part needs before assembly.

## Parts List

### Cedar Log Bed

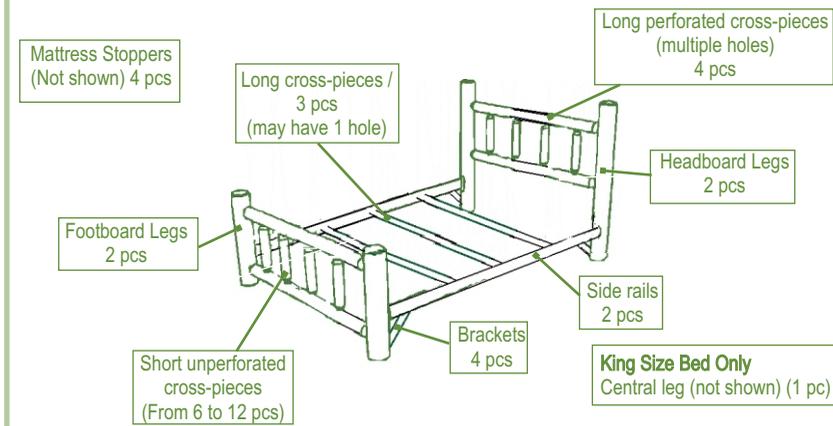

### Cedar Diamond Log Beds:

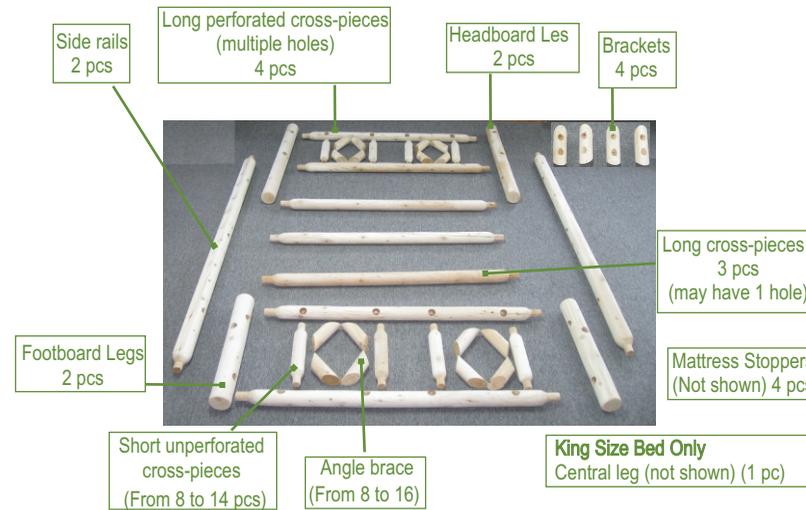

## Important

Read, understand and follow all warnings and assembly instructions before assembling or using this product. Failure to do so may result in serious injury, death or damage to property.

**WARNING:** This package contains small parts and is a choking hazard, keep away from children and pets during assembly. At least two people are recommended for safe assembly and installation of this product. Once assembled, make sure the product is placed on a firm, level surface.

Do not exceed the weight limits listed below:

**Twin beds:** Limit of 500 lbs (226 kgs) **Double/Full beds:** Limit of 800 lbs (362 kgs)  
**Queen beds:** Limit of 800 lbs (362 kgs) **King beds:** Limit of 800 lbs (362 kgs)

## Bag Contents

### CEDAR LOG BEDS:

- 2" nails:
  - 20 nails - twin
  - 24 nails - double/full
  - 28 nails - queen
  - 32 nails - king
- 2 1/2" nails:
  - 18 nails - twin, double/full, queen
  - 20 nails - king
- 8 washers
- 8 lag screws
- assembly guide

### CEDAR DIAMOND LOG BEDS:

- 2" nails:
  - 16 nails - twin
  - 32 nails - double/full, queen, king
- 2 1/2" nails (headboard and footboard posts):
  - 16 nails - twin,
  - 16 nails - double/full
  - 20 nails - queen
  - 28 nails - king
- 8 - 2" nails (stoppers)
- 19 - 2 1/2" nails
- 8 washers
- 8 lag screws
- assembly guide

## Required Tools

- Hammer
- 1/2" Ratchet Wrench


## A Note About Wood Furniture

All log furniture is subject to a natural process called "checking." As wood releases moisture, checking can occur across or through its annual growth rings. This normal result of wood seasoning occurs only on the surface of the wood, and does not affect the wood's structural performance or integrity.

Solid wood such as this has knots and cracking which are normal and should be considered an enhancement to the natural beauty of this product.

## Diamond Bed Design

Design of the headboard and footboard, according to the size of your bed.

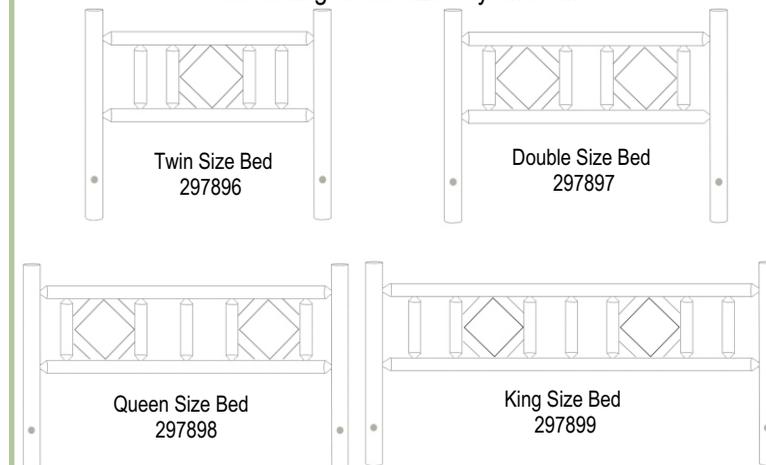

1

Join two long, perforated cross-pieces to the short, unperforated cross-pieces. Lightly tap at the joints. Repeat this step to join the other two long, perforated cross-pieces to the remaining short, unperforated cross-pieces. Join the two footboard legs (shorter legs) to one of the preceding assemblies as shown in image B. Lightly tap at the joints. Repeat this to join the two headboard legs to the remaining preceding assemblies.

A)



Always place a piece of wood (included in packaging) or rubber between the hammer and the piece of furniture to avoid damaging it.

B)




The remaining hole of the legs should be directed toward the top, as illustrated.


4

Lay the bed on the side. Assemble the brackets by joining 1 side to 1 leg, using two lag screws and two washers per bracket, according to the pre-drilled places as illustrated below in image A.

A)

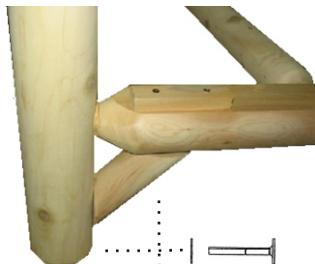

B)

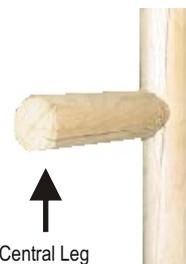

Central Leg

**B) KING BEDS ONLY:** While bed is on its side, join the central leg to the long cross-piece that has a hole in the middle. Lightly tap at the joint. Set the bed on its legs and make sure the central leg is perpendicular to the ground. If not, make adjustments by varying the depth of insertion of the part or its orientation.

2

Lay the two side rails flat on the ground, making sure to place the flat side directed towards the top. Join the three long cross-pieces to a side rail. Lightly tap at the joint. Repeat to join the other side rail.

**Note for King Beds ONLY:**

The long cross-piece that has one hole in the middle should be placed in the middle of the two other long cross-pieces and the hole should face the ground.



Using 2" nails, nail the joints between the headboard and footboard posts (short, unperforated cross-pieces). Using 2 1/2" nails, nail the joints of the side rails, the long cross-pieces and the joints between the headboard, the footboard and the legs. (FOR KING SIZE ONLY: Use 2 1/2" nails, nail the joints of the central leg to strengthen it, as shown in Image A.) Once complete, lay the mattress on the frame and proceed to step B in the box below to install the mattress stoppers.


5

**Nailing**

Nail joints at a perpendicular angle only.



A)

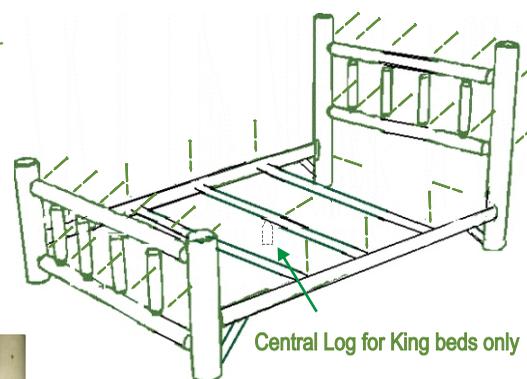

Central Leg for King beds only

B)



Mattress Stopper

Using 2" nails, assemble the stoppers on the sides, at the four corners of the bed, as shown in image B. It will prevent your mattress from moving.

3


Join the headboard assembly, created in step 1, to the assembly created in step 2 as shown in image A. Lightly tap at the joints. Repeat these operations to join the footboard assembly as shown in image B.

A)



Flat sides should be directed towards the top.

B)

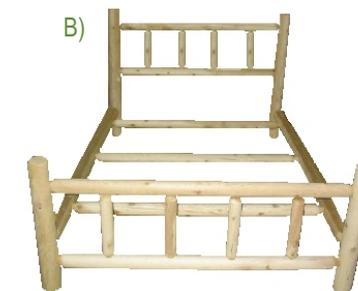

6

**Cedar Diamond Log Beds Only:** Using 2" screws, screw the angle brace at a perpendicular angle. Use two screws per angle brace, total of 8 screws per assembly. Once complete, place the bed on a firm, level surface for use.

